One Bay SATA/IDE Turbo NAS

User Manual

Revision: v0117

Date: 2009/07/23

For firmware version v1.17

Table of Contents

1. Introduction 3
1.1. Key Features 3
1.2. Network Environment 3
2. Hardware Installation 5
3. Search Turbo NAS by SyncQuick™ NAS Manager 8
3.1 Format the Hard Disk 9
4. Configuration 10
4.1. Identification 10
4.2. Date/ Time setting 11
4.3. IP Configuration 11
4.4 Disk Utility 12
4.5 Maintenance 13
5. SAMBA Server (SMB) 15
5.1 How to crate user 15
5.2 How to modify account password 18
5.3 How to delete a SMB (SAMBA) account 19
6. FTP Server 21
6.1 How to crate FTP account 21
6.2 How to delete FTP account 22
7. XBOX 360 UPnP Media server 23
8. Printer Server 25
9. Bit Torrent server 30
10. Mac installations (Mac 10.5.4 or above) 33
11. Map your Turbo NAS as a Network Drive 36
12. Q&A 37

1. Introduction

Thank you for purchasing One BAY IDE+SATA Turbo NAS. Now you can easily add our Turbo NAS into your Network. Before using this device please read the Key Features below.

1.1. Key Features

- Support both SATA/ IDE 3.5” hard disk
- Support Auto IP (DHCP server or DHCP Client)/ Fixed IP
- Under network environment, it supports one 10/100Mbps Ethernet port
- Password management provides secure access to HDD and web management
- Support SAMBA (SMB)
- Support FTP server
- Support Bit Torrent download server
- Support UPNP AV media & Apple i-Tunes music server
- Support USB Printer server
- Compatible with Windows 2000/XP/VISTA, Mac 10.5.4 above

One BAY IDE+SATA Turbo NAS is a flexible, economical and powerful unit for your network. Follow the instructions below which will help you to connect, to set up, and to configure it.

1.2. Network Environment

There are 3 different setup conditions you can choose:

1. Setup Turbo NAS as DHCP Client:
If your Turbo NAS operates under a built-in DHCP server router (ex. Internet Sharing Hub), it will obtain an IP from DHCP Server automatically.

2. Setup Turbo NAS as DHCP Server:
If your operating environment does not support DHCP server, Turbo NAS will immediately act as DHCP server and assign an IP for installation.

3. In Static IP environment:
You need first configure the IP for Turbo NAS to operate in the static IP environment. for configuring details, please refer to “IP Configure” setup page.

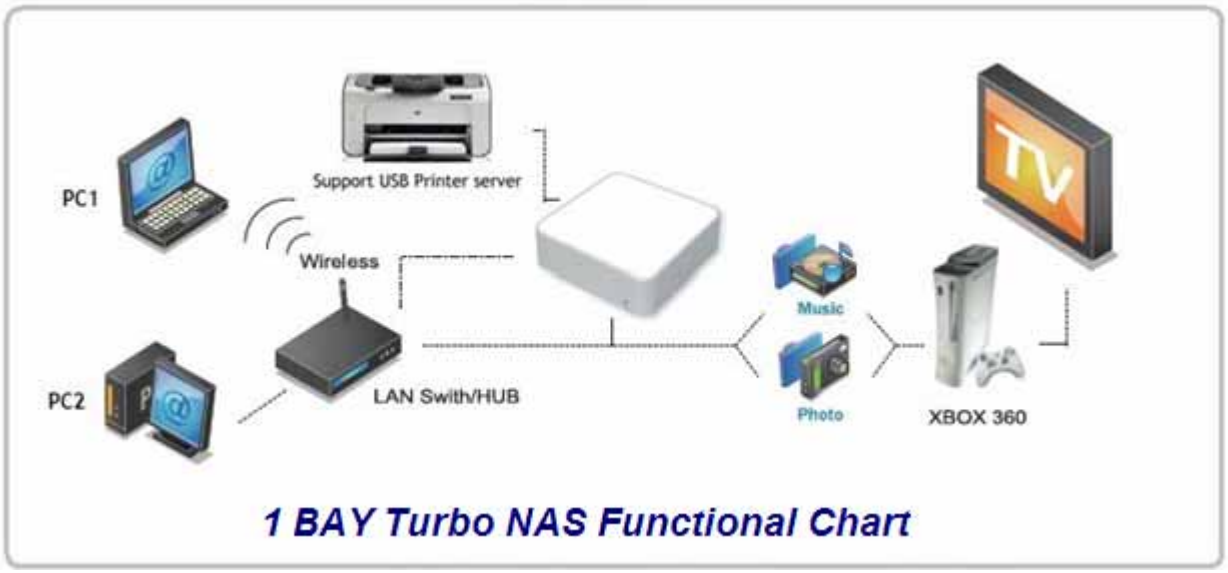
PC1
Support USB Printer server
Wireless
PC2
LAN Swith/HUB
Music
Photo
XBOX 360
TV
1 BAY Turbo NAS Functional Chart

2. Hardware Installation

Step1. Remove 4 screws form the bottom case.	Step2. Remove the upper case
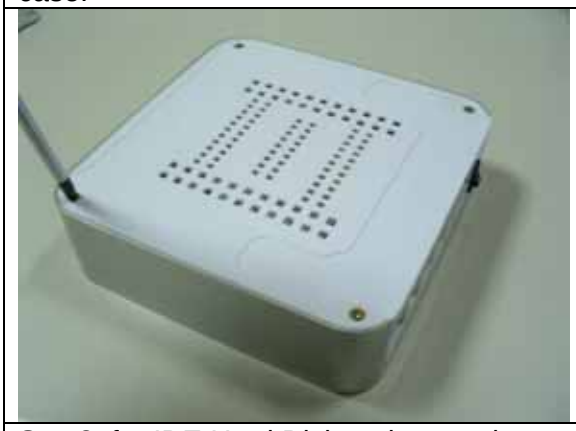	
Step3. for IDE Hard Disk make sure jumper is in the Master Mode.	Step4. Place the Hard disk in to 3.5” tray.
Step5. Connect both IDE cable and power cable in to Hard Disk.	For SATA HDD please connect both SATA cable and SATA Power cable.

Step6. Use hand Screw to fix both side of Hard Disk.	Step7. Slowly closing both case.
Step8. If the case cannot match to correct position, please adjust the Hard disk position again until both case fits.	If upper case does not fit in properly, please adjust the Hard disk position again.
Step9. Tighten up four screws from bottom plate	Step10. Stick 2 rubber foot on the bottom case for more protection

Step11. Connect RJ45 LAN cable between LANDISK and LAN hub or Router.	Step12. Connect power adapter and turn the power “on”, hardware installation completed.
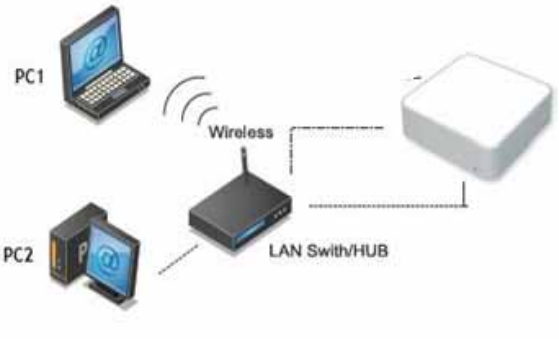	

If you connect Turbo NAS to your computer directly, make sure to obtain the IP address and DNS settings automatically, otherwise you may not be able to find the device.

3. Search Turbo NAS by SyncQuick™ NAS Manager

1. Run the utility CD enclosed in package.

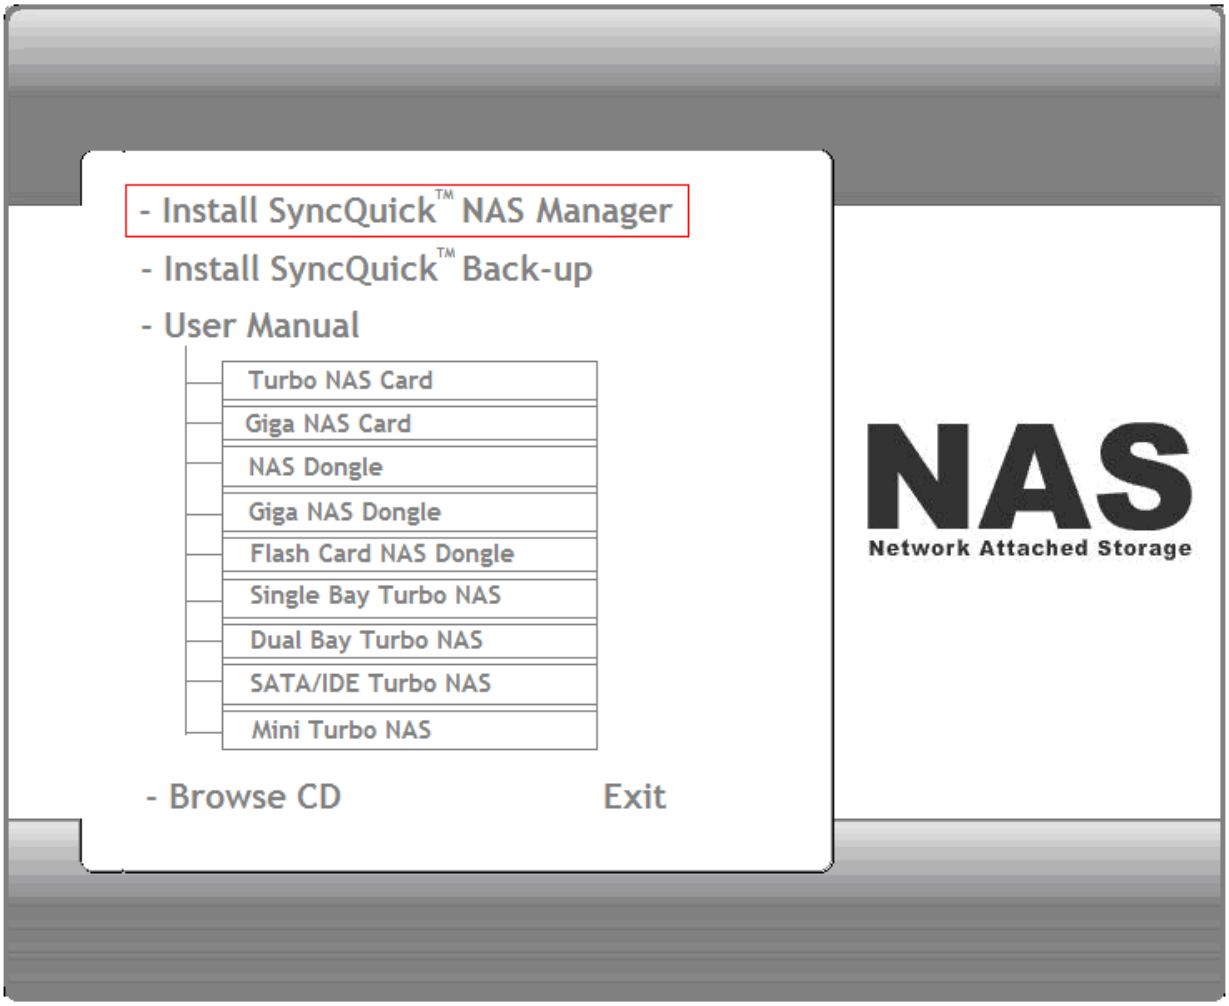

2. Select Auto Search and when Turbo NAS is found, right click the mouse button and select " **Open NAS Control page** " to start configurations.

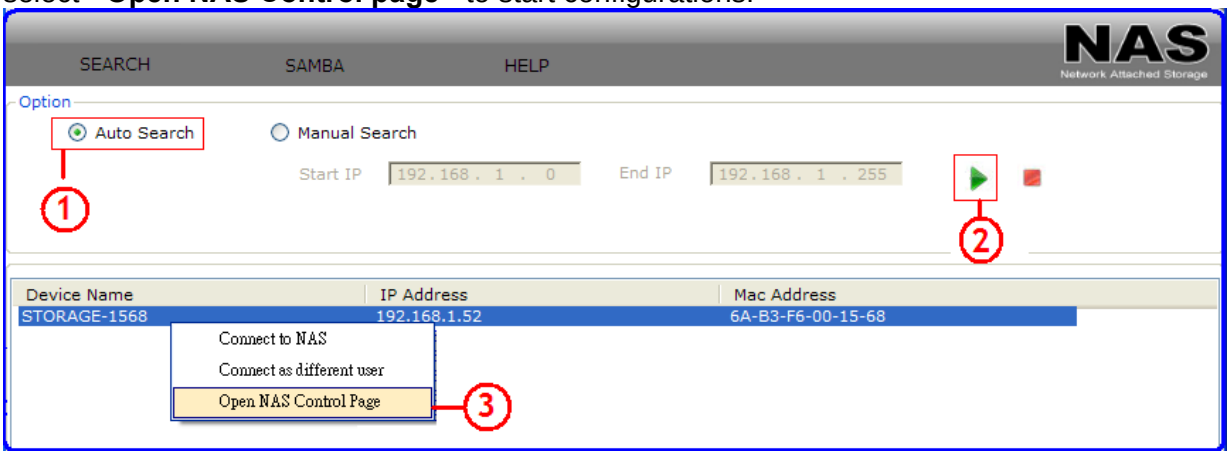

3. Default login is **"admin"** for both user name and password, click "**OK**" to enter configurations.

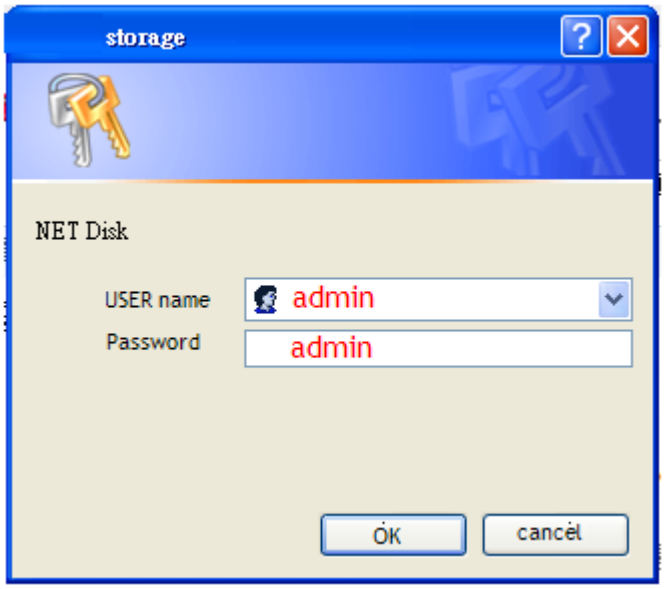

3.1 Format the Hard Disk

For the first time installation, you need to format hard disk into **FAT32** system file, this procedure applies to either new or used hard disk.

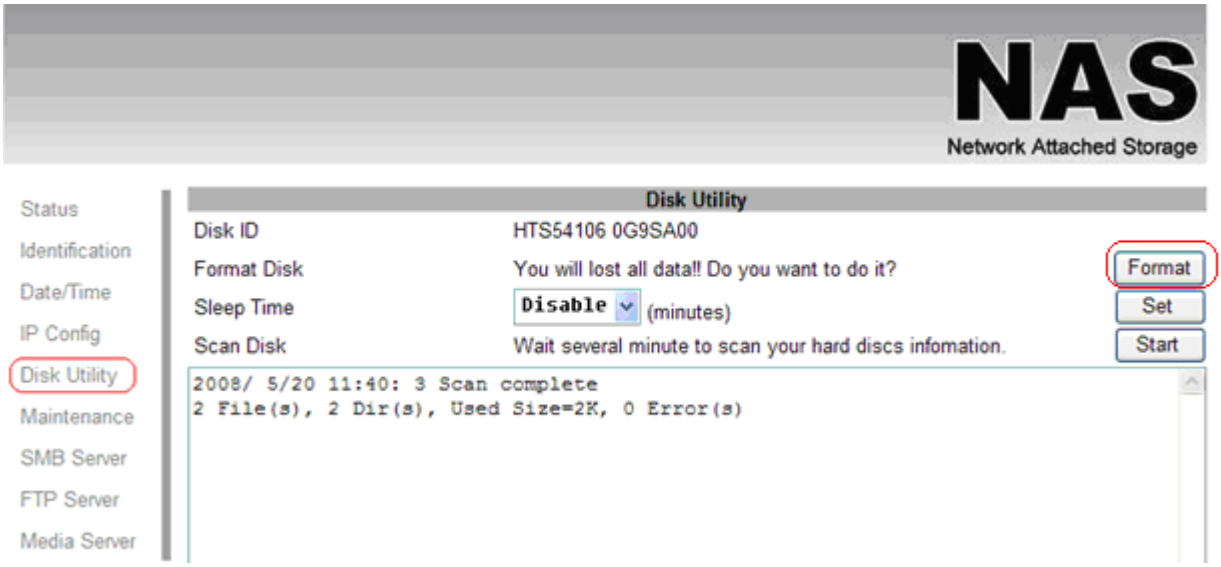

4. Configuration

The Status page provides the basic information for Turbo NAS.

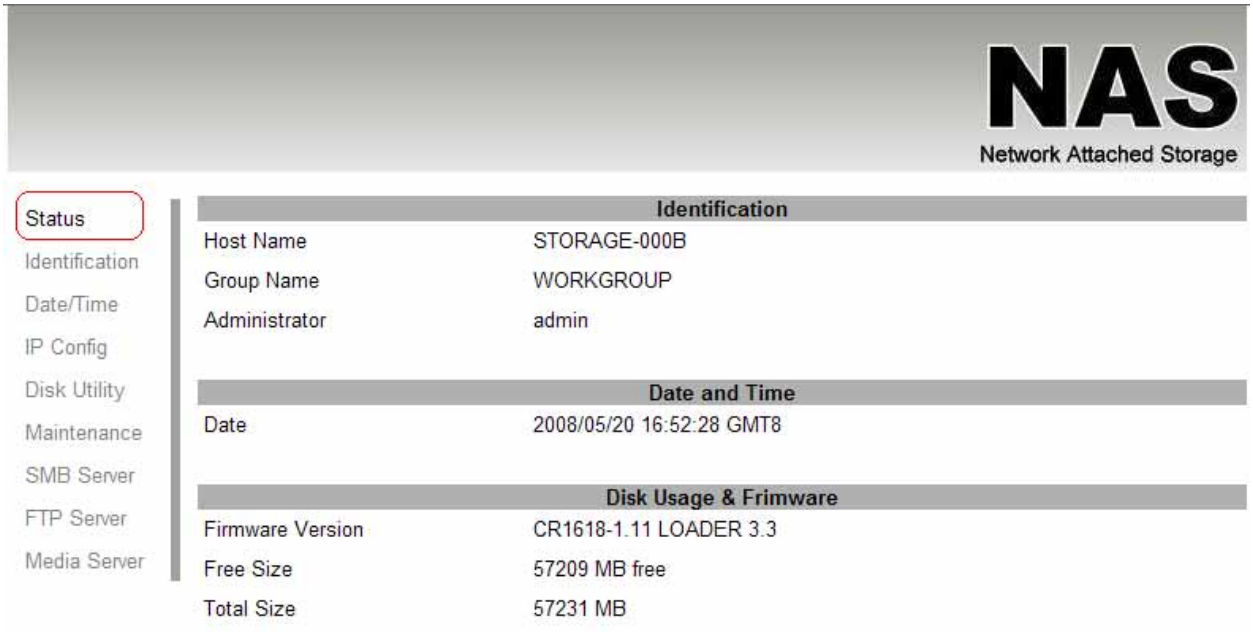

4.1. Identification

You can change and modify your host & group name, and password from this page. Click "**Apply**" to save the setting.

- Host name: This is used to identify your device on the network. If you prefer a different name, type in the new name and click "**Apply**" to save setting.

- Group Name: This should be same as your workgroup. In general, the default "**WORKGROUP**" will be OK. But if your workstation belongs to different workgroup, type in the correct group name to modify.

In Window O/S, right click on "**My computer**", choose "**Properties**", and go to the computer name tab to see your current workgroup.

For Mac O/S to join windows workgroup, open the directory access utility (under Applications-> utilities), select SMB and click configure to modify the settings (administrator access required to access this option.)

Note: we strongly suggest you to change the password as soon as you logged in, to prevent unauthorized access.

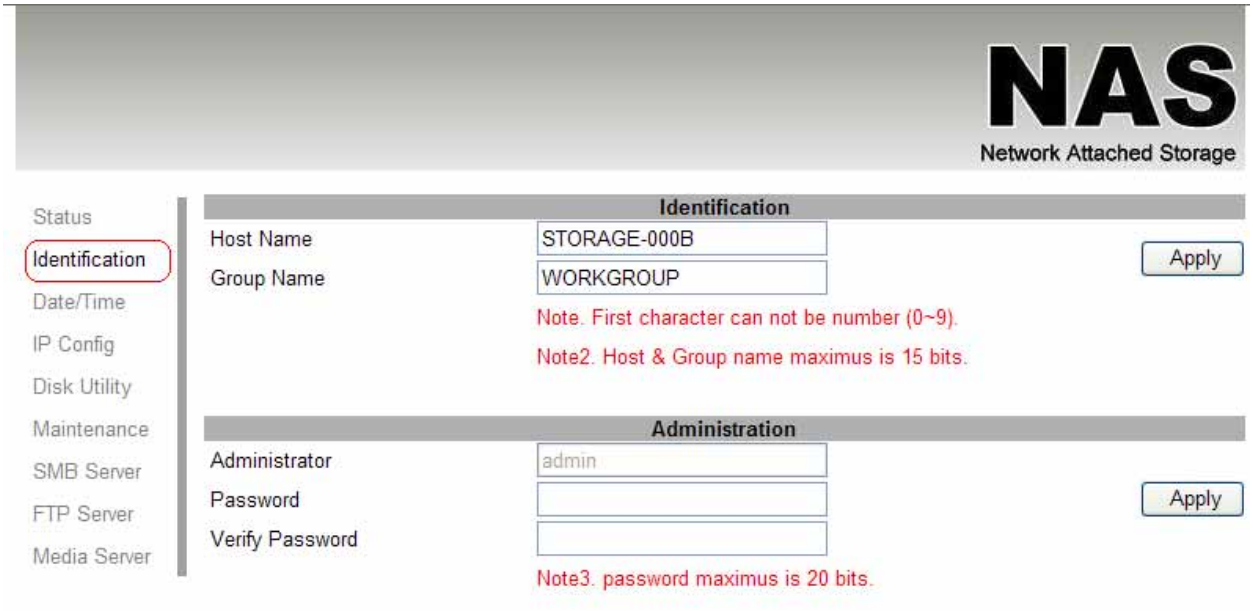

4.2. Date/ Time setting

You can change time setting from this page. Clicks "**Apply**" to save the setting. By default SNTP is in network time service, your can also select "Synchronize to PC". If internet access is available we recommended setting SNTP to Network time service instead.

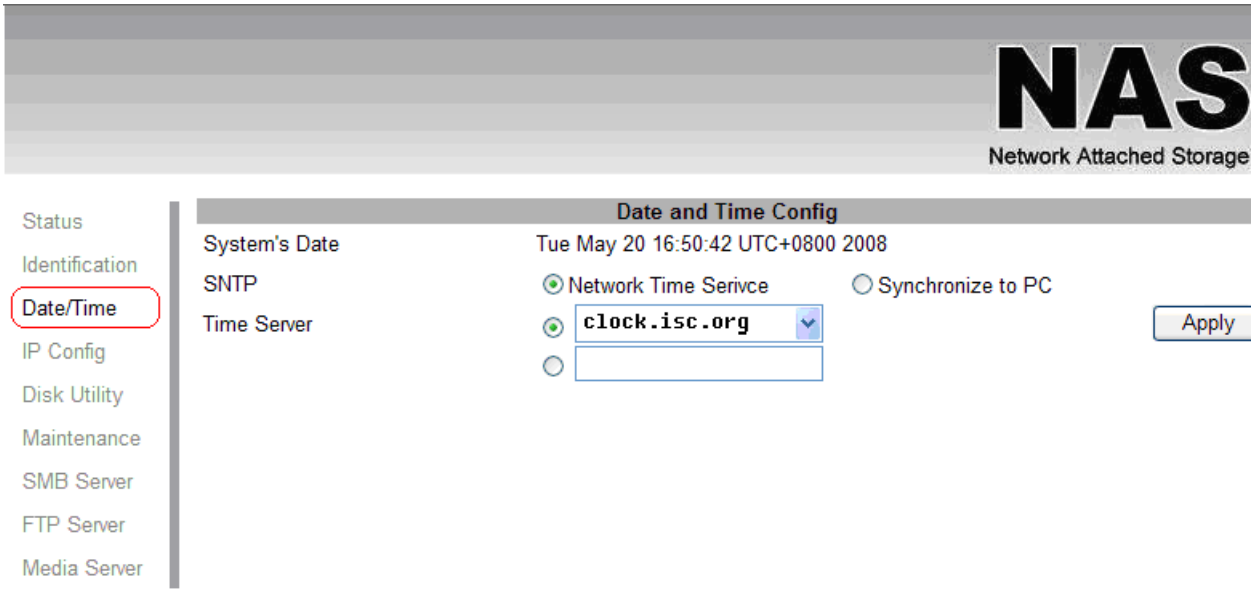

4.3. IP Configuration

By default, the "IP config" is set to "Automatic IP". This is the recommended setting and will allow Turbo NAS to obtain its IP address automatically. If you prefer setting it manually, select the static IP option, enter your own value and click apply to confirm the new setting.

Setting it manually is useful when it often obtain a different IP address but you have a static IP address in order to mount the network drive or setup port forwarding as an example.

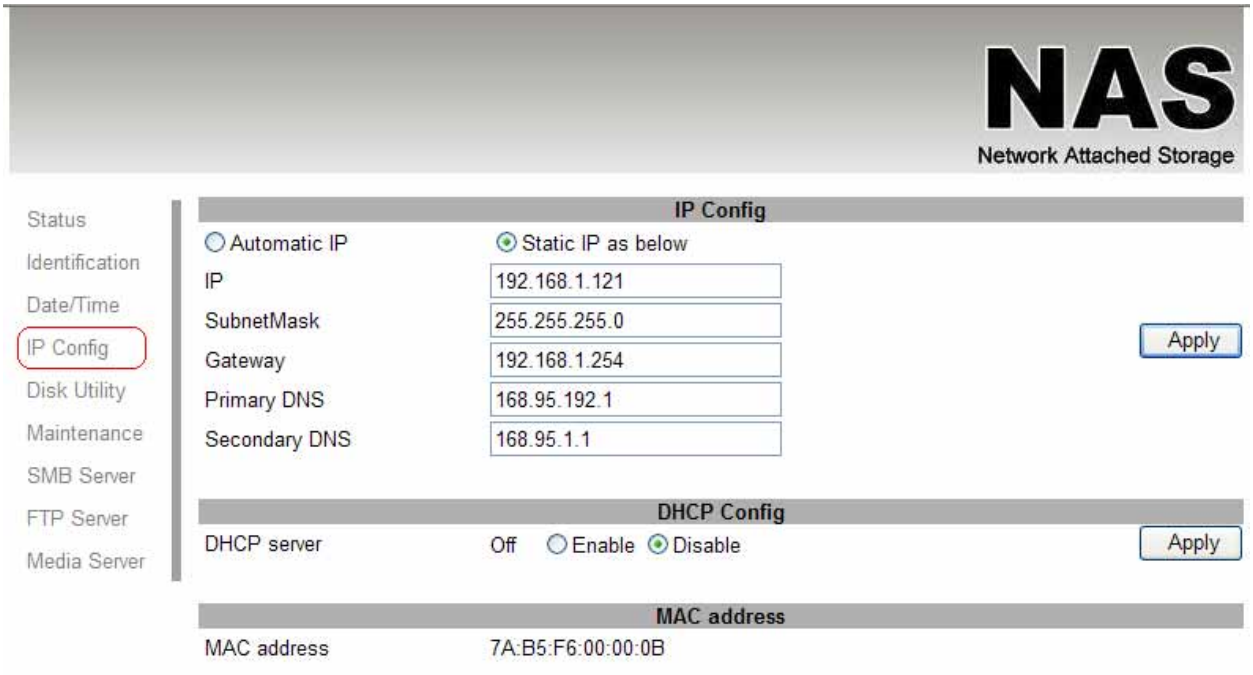

4.4 Disk Utility

In this page, you can manage the hard disk setting.

- Format: For the first time installation, you need to format hard disk into **FAT32** system file, this procedure applies to either new or used hard disk.

- Scan Disk: After the scan, it will show the number of file content and health status for the hard disk.

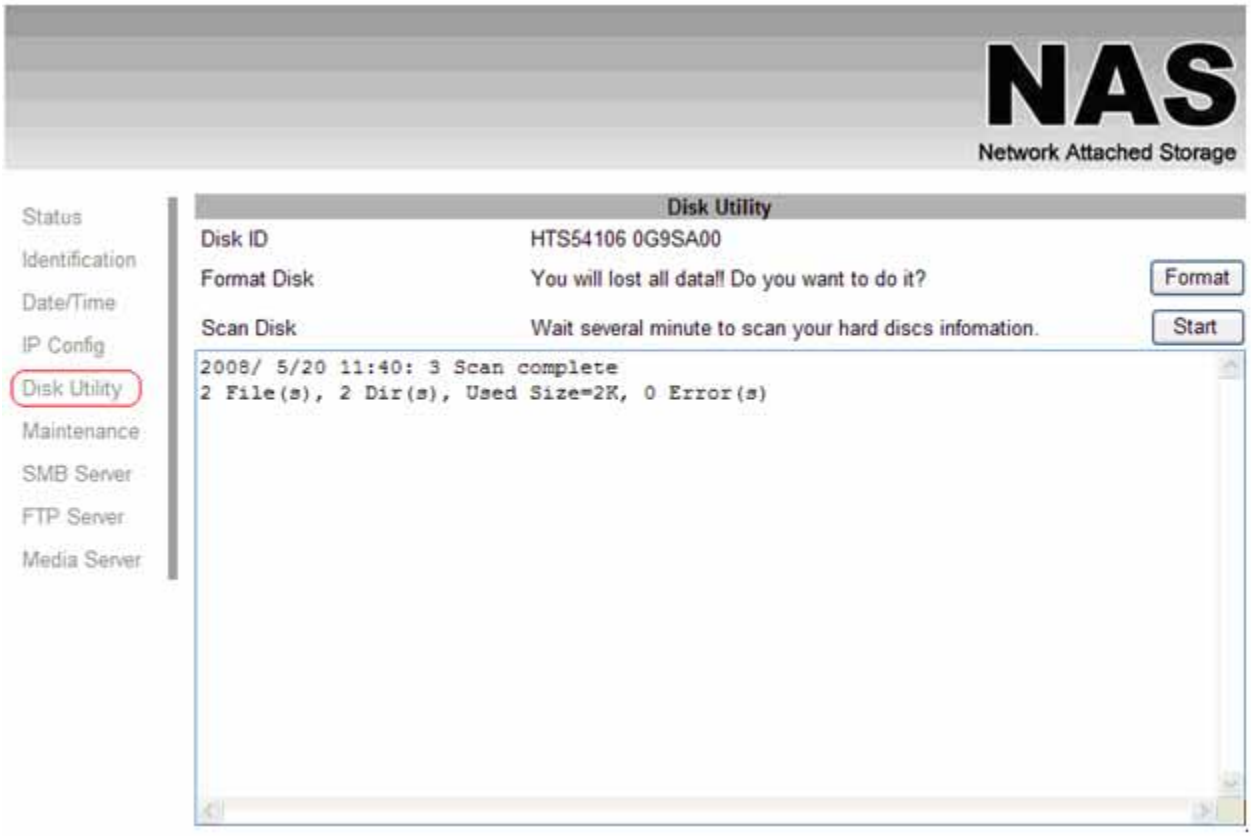

4.5 Maintenance

This page allows you to update Turbo NAS firmware, to go back to default setting or to reboot NAS system.

- Firmware update: Follow the steps below to update the loader and firmware for Turbo NAS.

1. Obtain the latest firmware from your vendor.
2. Store the firmware file in your computer and decompress it if necessary.
3. Browse your system and locate the firmware (BIN file).
4. Click on “upload”.
5. Confirm the pop-up massage to start the update.
6. Wait and DO NOT click anywhere else or turn off the power! This might take a few minutes.
7. Once the update is done, it will prompt you to reboot the device.
8. Click on ”reboot” to restart the device.
9. Wait for about one minute and then go to the status page to confirm the update is successful.

- Factory defaults: Forgot your admin password?? Click on the factory fefaults and go back to the default password setting. Besides SAMBA/FTP account setting will still remain in the Turbo NAS, rest of setting will go back to factory default.

- System reboot: This can be used to restart the network drive after a firmware update.

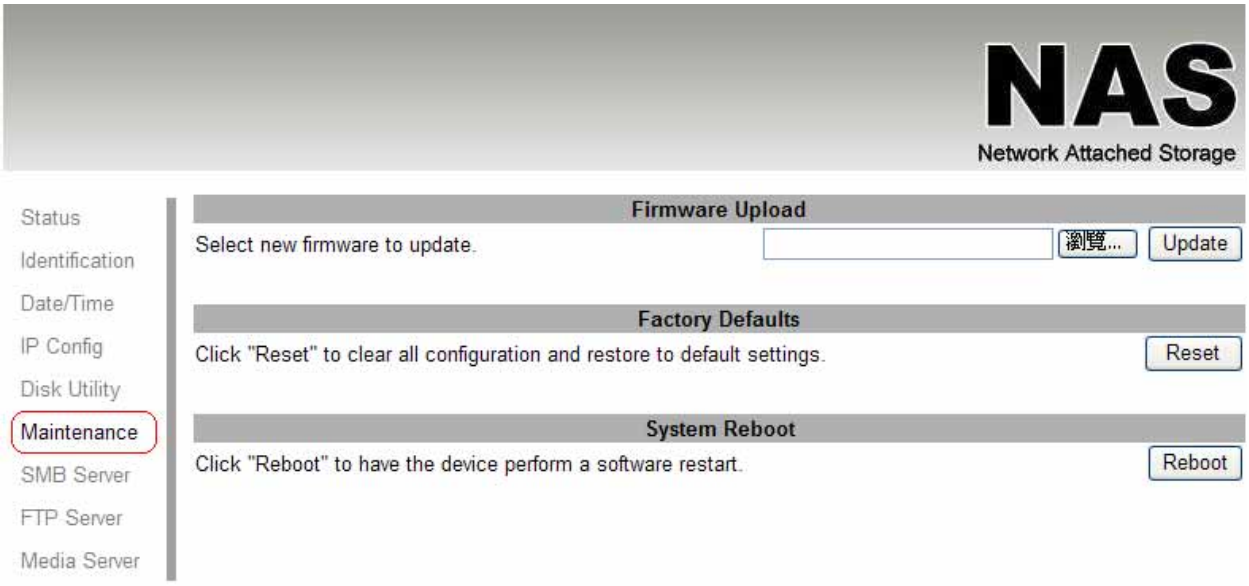
NAS
Network Attached Storage
Status
Identification
Date/Time
IP Config
Disk Utility
Maintenance
SMB Server
FTP Server
Media Server
Firmware Upload
Select new firmware to update.
瀏覽...
Update
Factory Defaults
Click "Reset" to clear all configuration and restore to default settings.
Reset
System Reboot
Click "Reboot" to have the device perform a software restart.
Reboot

5. SAMBA Server (SMB)

SMB server allows you to share data or files through LAN environment. A default “guest” folder is created and shared to all users from Turbo NAS.

Note: Use **ONLY English** alphabet for folder names and no special characters when creating new folders.

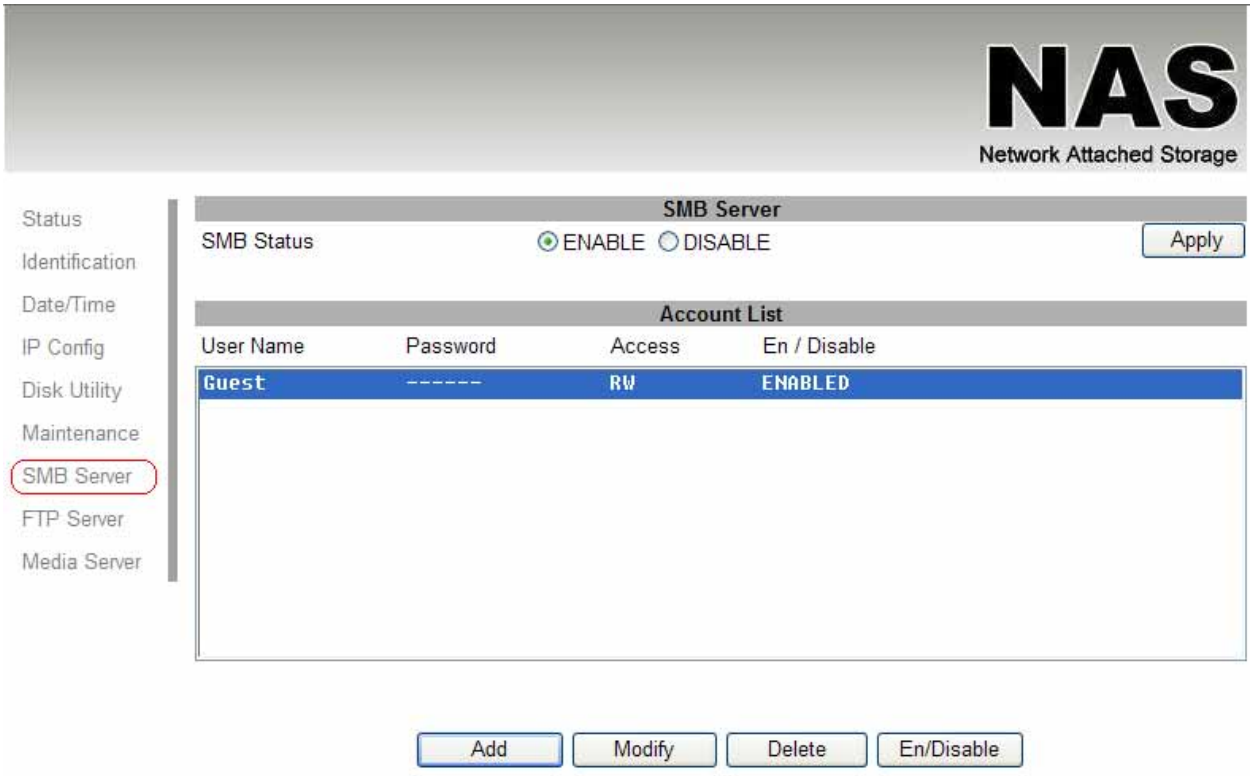

5.1 How to crate user

Click on the **“Add”** button. Type new account name, password and click **“OK”.**
Eg: “User1” for demonstrations.

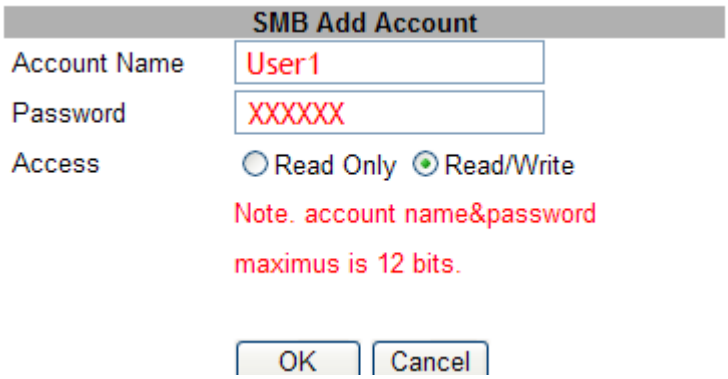

In the same time, Turbo NAS will also crate a SAMBA folder named “User1”, click **“Modify”** to share the folder.

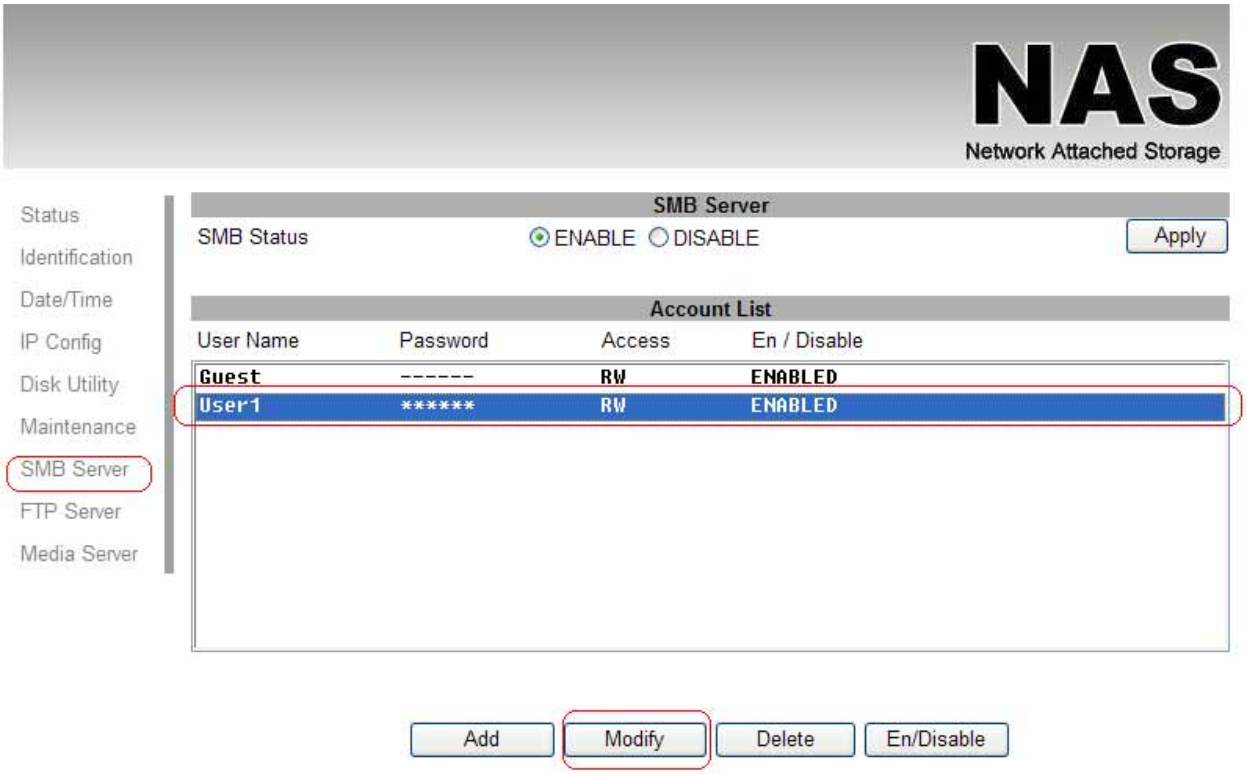

Select “User1” and add it into “Sharing List”.

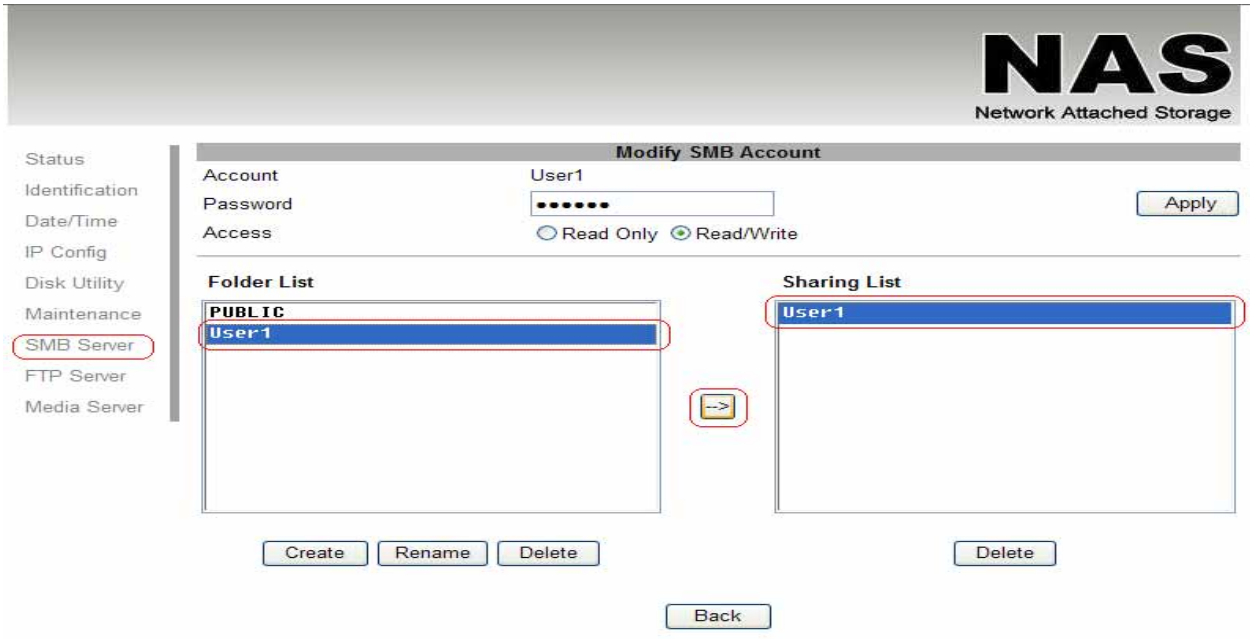

You can “Run” from window start button, type \\ follow by the IP address (eg:\\192.168.1.121), and click **“OK”** to continue.

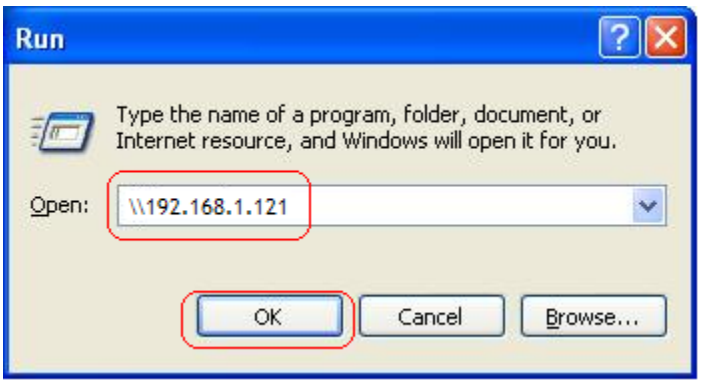

Type “User1” and password to login.

Now you have set up the folder that you wish to share on your Turbo NAS. The shared folder can be accessed from other computer on your local network.

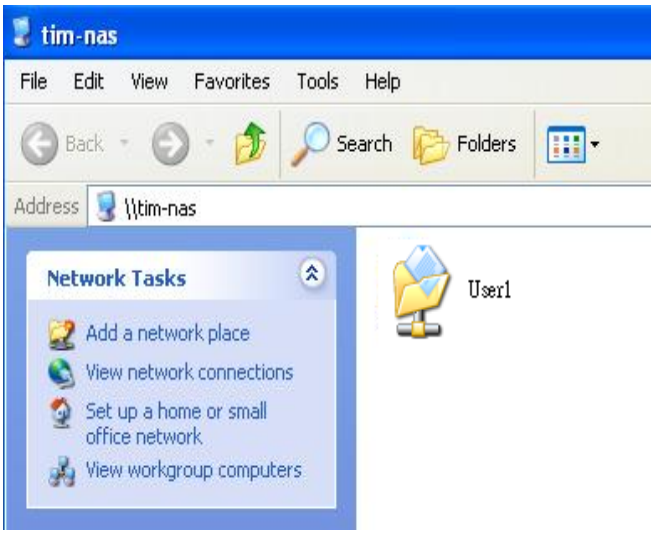

5.2 How to modify account password

Select the “User1” and than click “**Modify**”.

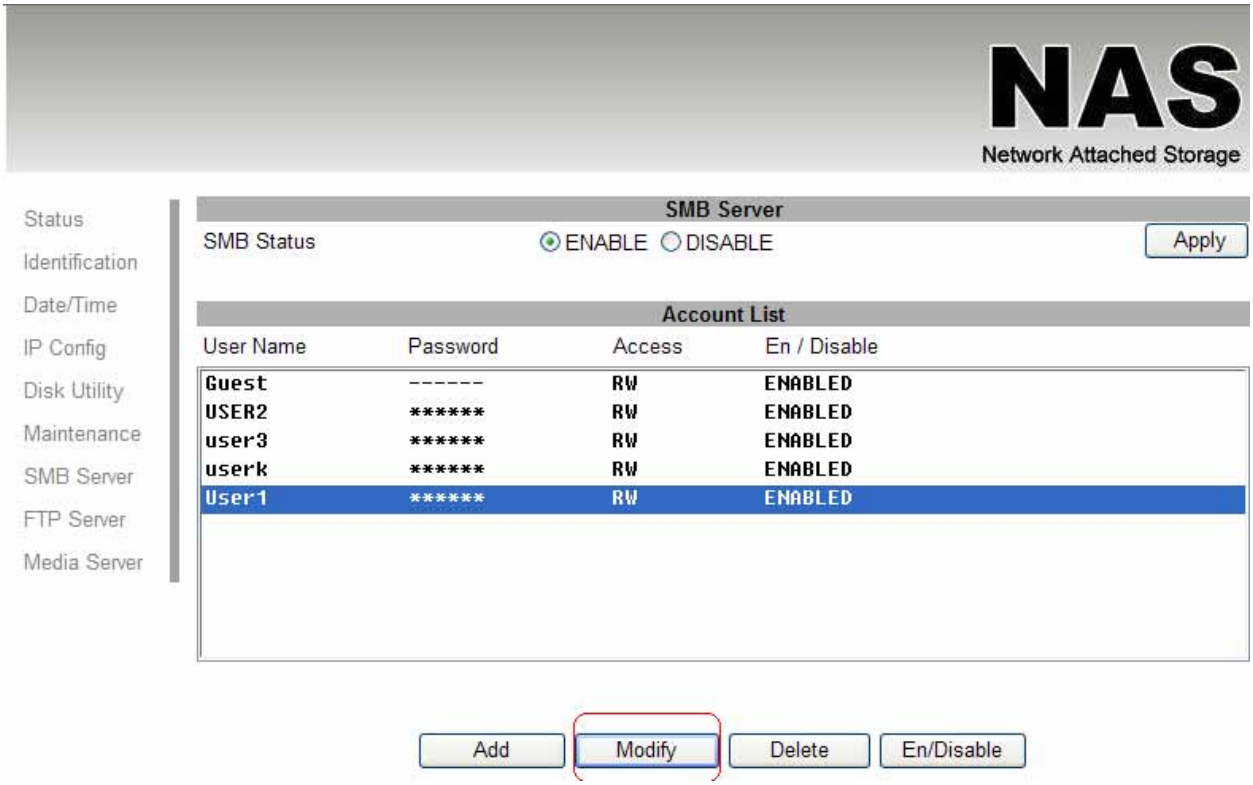

Enter new password and click **“Apply”** to save setting.

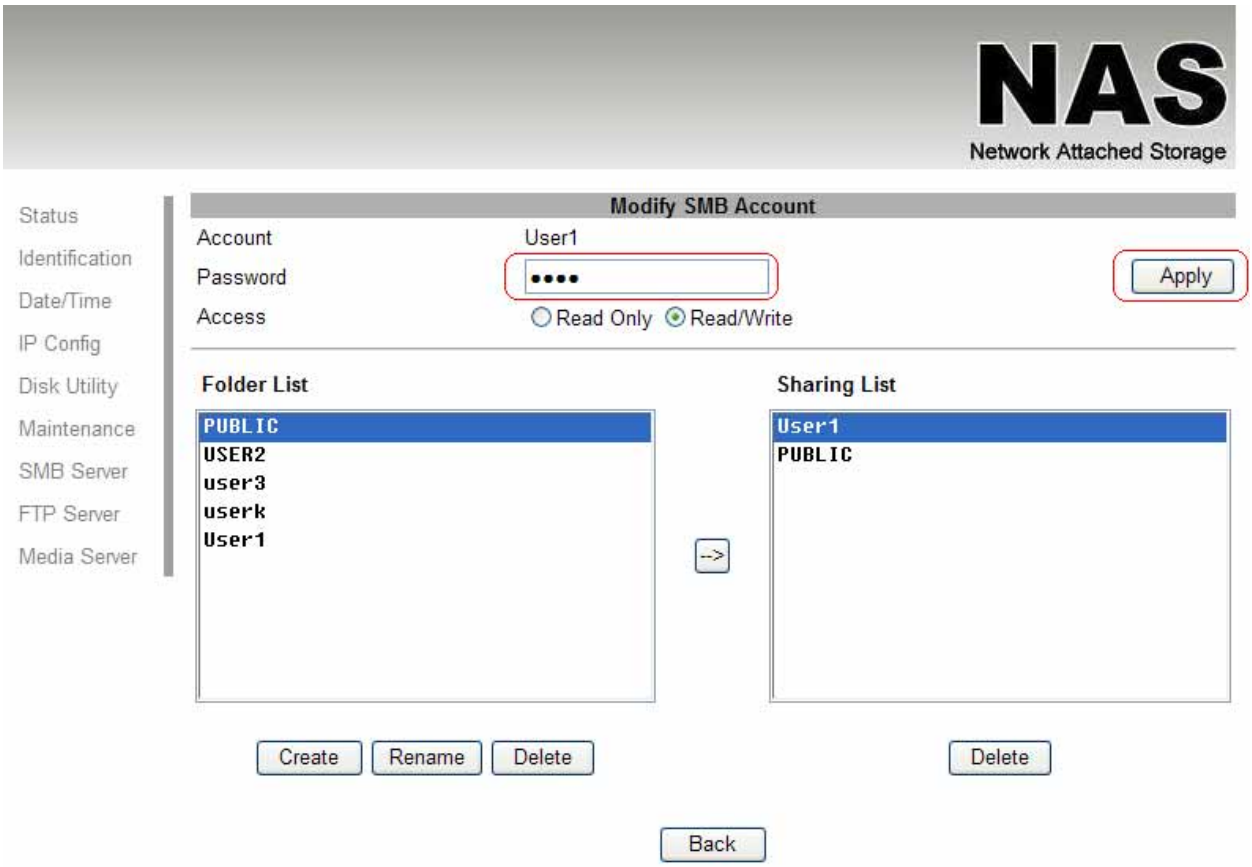

5.3 How to delete a SMB (SAMBA) account

Select an account you wish to delete, click **"Delete"** to proceed. Please note that all the data inside the folder will be lost after the delete.

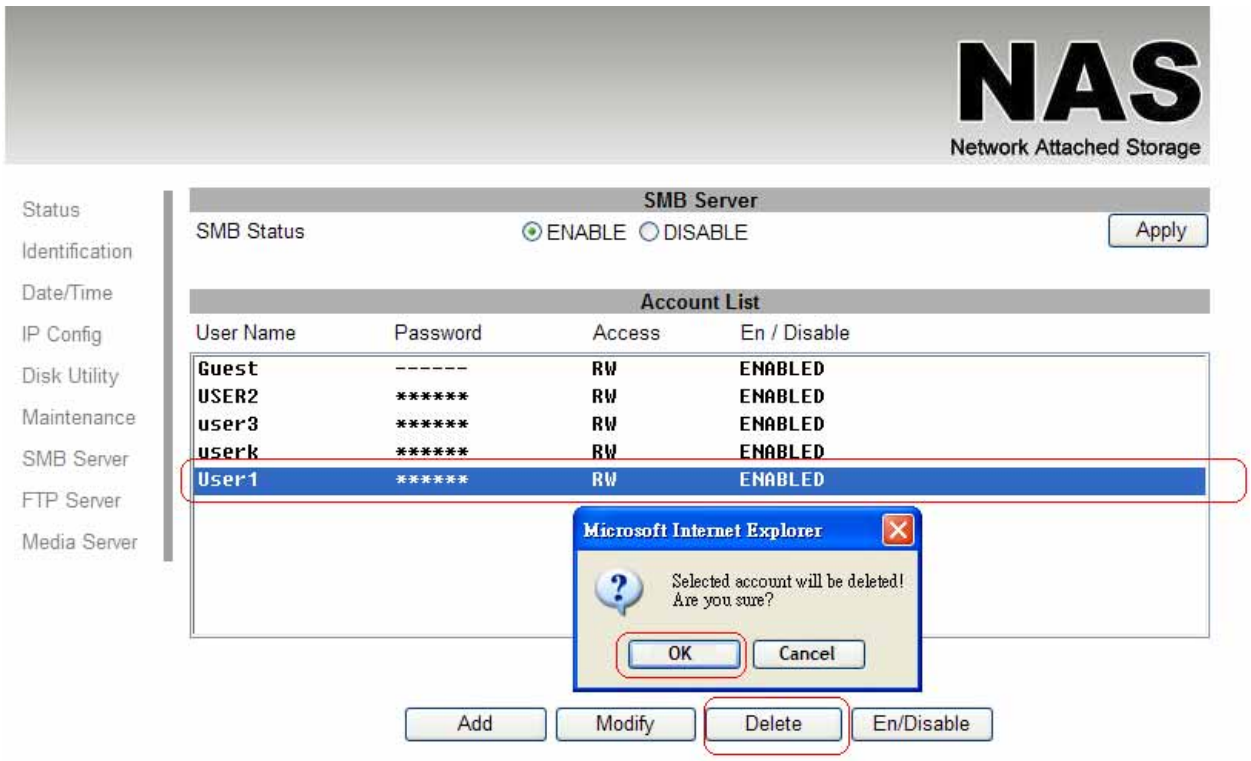
NAS
Network Attached Storage
Status
Identification
Date/Time
IP Config
Disk Utility
Maintenance
SMB Server
FTP Server
Media Server
SMB Server
SMB Status
ENABLE
DISABLE
Apply
Account List
User Name
Password
Access
En / Disable
Guest ------ RW ENABLED
USER2 ****** RW ENABLED
user3 ****** RW ENABLED
userk ****** RW ENABLED
User1 ****** RW ENABLED
Microsoft Internet Explorer
Selected account will be deleted!
Are you sure?
OK
Cancel
Add
Modify
Delete
En/Disable

6. FTP Server

Remember to “Enable” the FTP service on the status page, when you plan on using the FTP server.

- FTP server configuration: The standard port for FTP service is 21. If required, you can change it into any port ranging from 1025-6550. But in general, we recommended using the default port of 21.

- File language support: By default, the encoding is set to English. If you want to store or transfer files with a different encoding (different language), choose the corresponding language from the drop down list. **In order to transfer and view the files correctly, it is important that you select the correct language!**

- Anonymous: By default an anonymous user name has been created, it allows FTP users to login without username and password. For security reasons, it is best to add a password!

Note: To be able to share FTP resource via internet, you need a router to assign the external IP to your Turbo NAS. Contact your router vendor on how to assign the external IP.

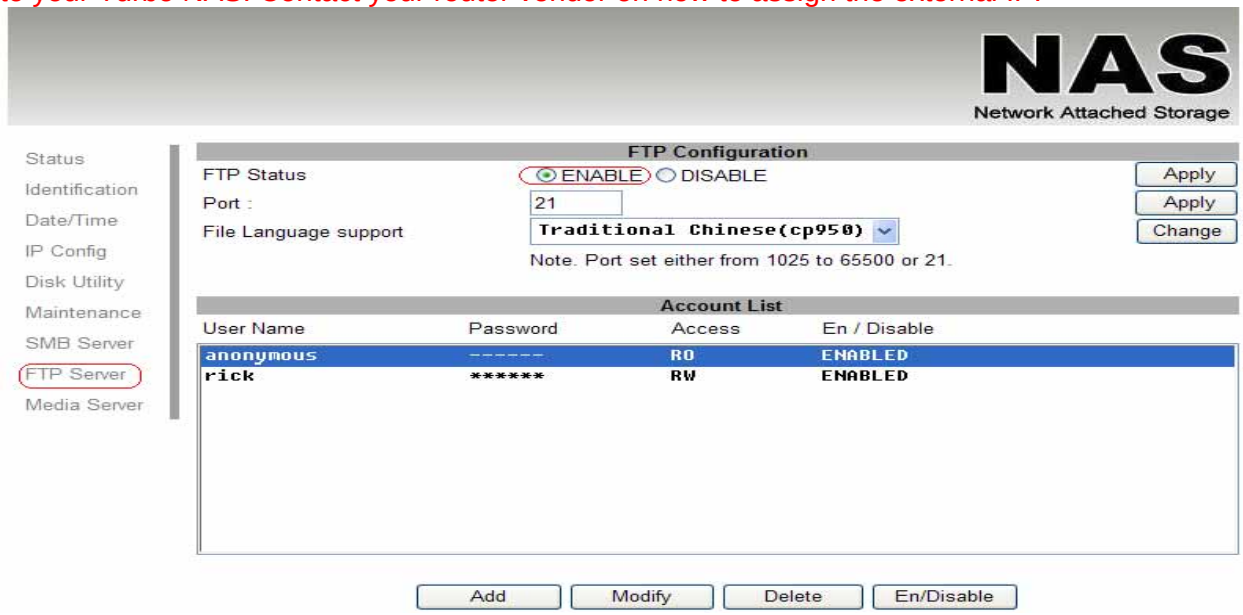

6.1 How to crate FTP account

FTP server allows you to share your data through internet, so an internet resource and router is required before setting up FTP server.

Select FTP server and clicks **“add”** button and enter a name and password for the new FTP account and click **“OK”**. to continue.

In the account list, you can see an overview of the existing accounts and status. For FTP file transfers, we recommend to use other dedicated FTP client software e.g.: SyncQuick FTP, Cute FTP etc.

Note: When creating FTP accounts, please use ONLY English alphabet and no special character or space for FTP account name.

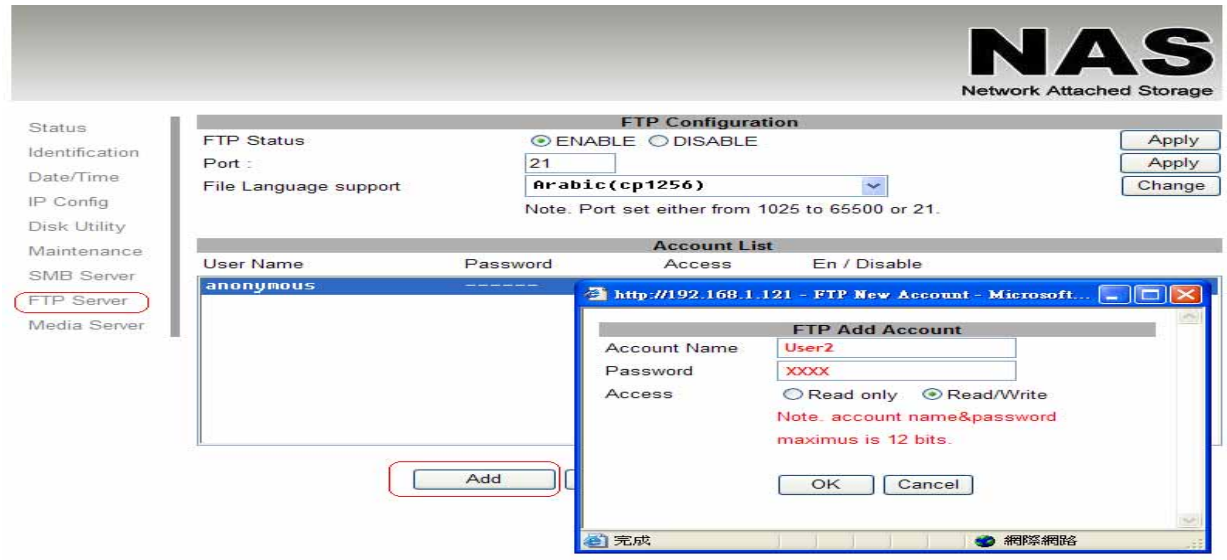

6.2 How to delete FTP account

In the “Account List”, you can see an overview of the existing account and status; you can change them at any time by selecting the account and modifying, disabling or deleting it.

Note: Deleting a folder will also erase all the files stored inside that folder.

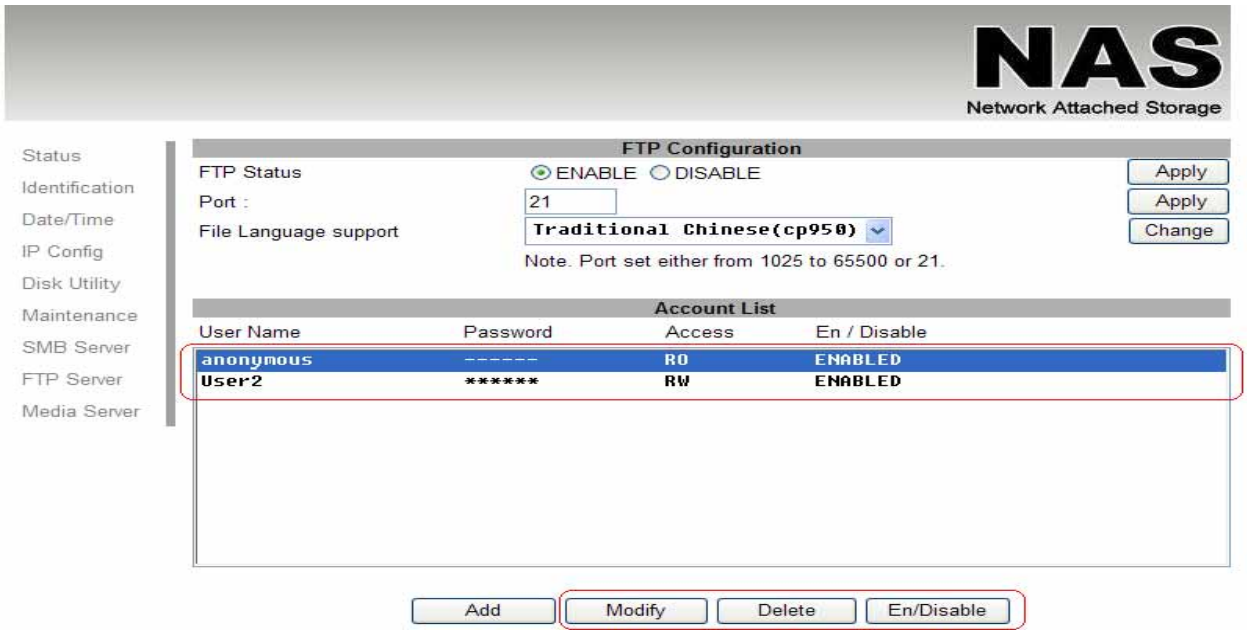

7. XBOX 360 UPnP Media server

The Media server on Turbo NAS can be used to share your photo and music files with a XBOX360 video game console from Microsoft that is connected to the same local network.

Before you start, make sure both devices are connected to the same local network and turned on.

On your Turbo NAS, go to the XBOX360 media page and make sure photo and are set to share folder and not disable, e.g. the **"PUBLIC"** is enabled Photo directory.

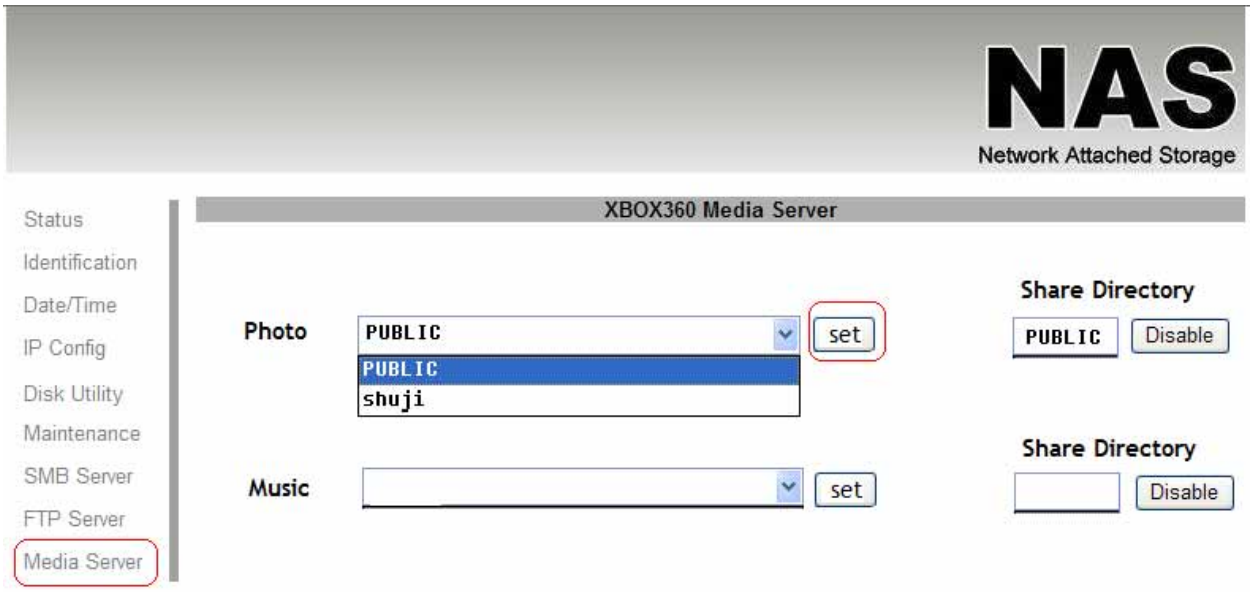

Go to media, select either Music or Pictures, and press **A** to continue on your XBOX 360.

Press **X** to change the source and select your network drive, it should show up as storage-xxx and display the folder that you have set up earlier on your Turbo NAS.

Inside the shared folder, you can access to your picture or music files, depending on which mode you are currently using. Select the files you would like to see or to listen, and start playback.

8. Printer Server

1. First, install your Printer driver into your computer, (for example. if Epson PL-6200L Printer is connected to the NAS, you must install PL-6200L driver into your computer first). After driver installation, please click **"Start"** → **"Setting"** → **"Printer and Faxes"** → **"Add a printer"**→ **"Next".**

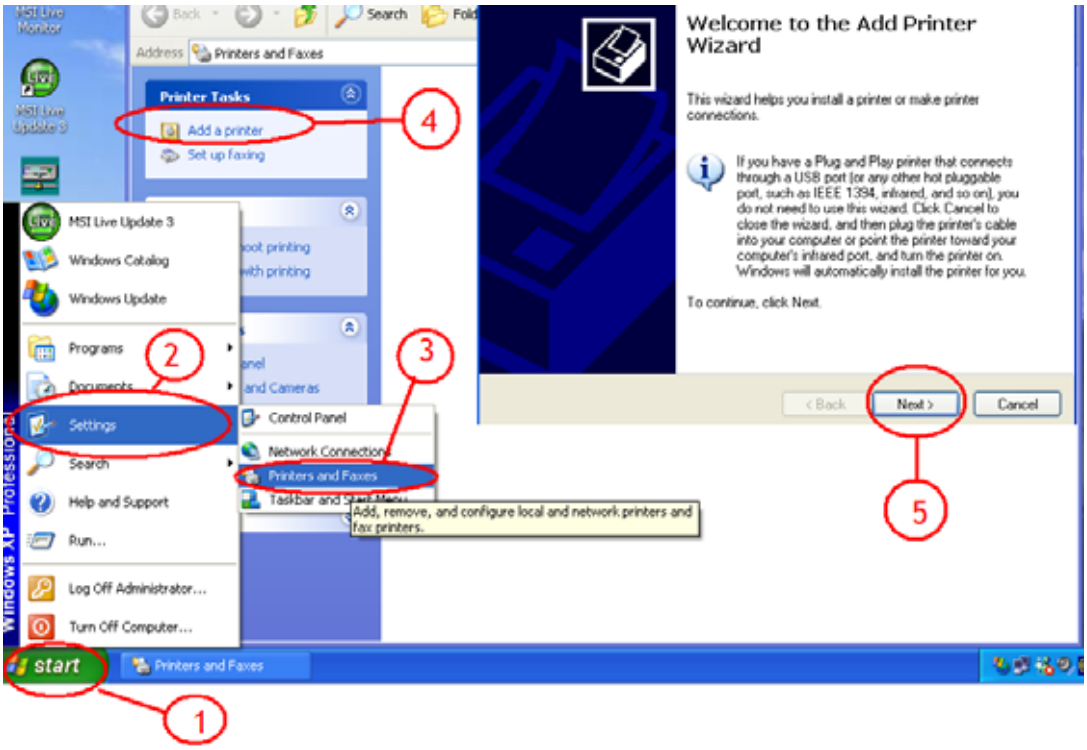
Printers and Faxes
Printer Tasks
Add a printer
Set up faxing
4
MSI Live Update 3
Windows Catalog
Windows Update
Programs
Documents
Settings
Search
Help and Support
Run...
Log Off Administrator...
Turn Off Computer...
2
3
Control Panel
Network Connections
Printers and Faxes
Add, remove, and configure local and network printers and fax printers.
start
1
Welcome to the Add Printer Wizard
This wizard helps you install a printer or make printer connections.
If you have a Plug and Play printer that connects through a USB port (or any other hot pluggable port, such as IEEE 1394, infrared, and so on), you do not need to use this wizard. Click Cancel to close the wizard, and then plug the printer's cable into your computer or point the printer toward your computer's infrared port, and turn the printer on. Windows will automatically install the printer for you.
To continue, click Next.
< Back
Next >
Cancel
5

2. Connect the USB printer to Turbo NAS. (there is an available USB port behind the NAS)

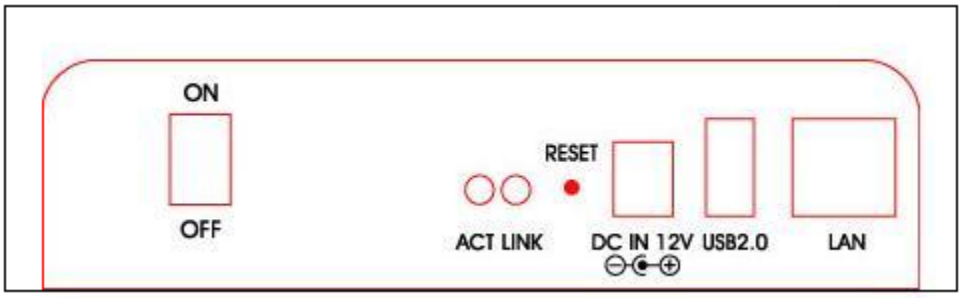

3. Go to **"Add Printer Wizard"**, select **"Local printer"** and click **"Next"** to continue.

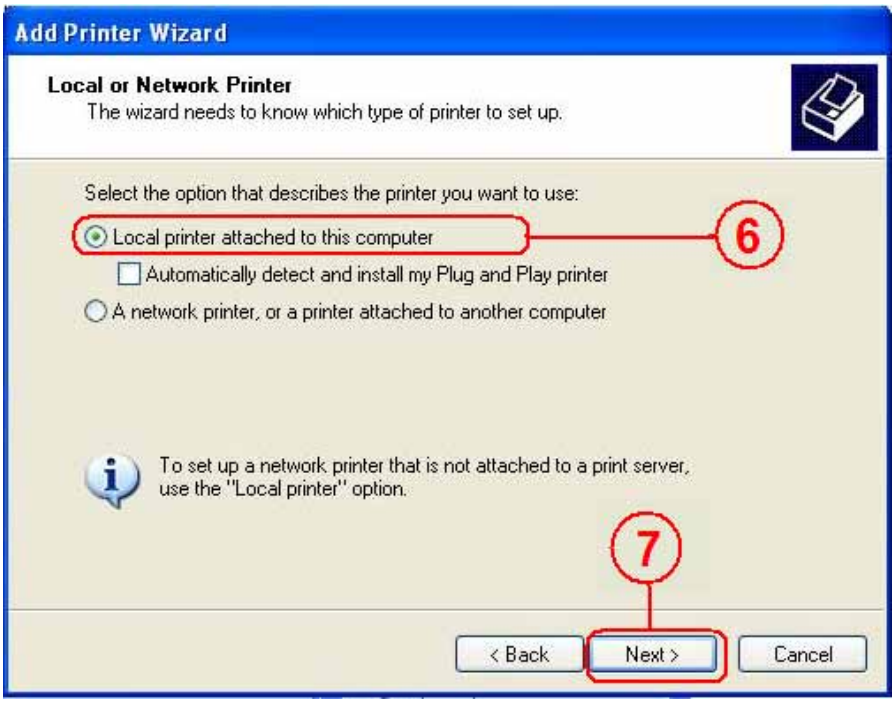
Add Printer Wizard
Local or Network Printer
The wizard needs to know which type of printer to set up.
Select the option that describes the printer you want to use:
Local printer attached to this computer
6
Automatically detect and install my Plug and Play printer
A network printer, or a printer attached to another computer
To set up a network printer that is not attached to a print server, use the "Local printer" option.
7
< Back
Next >
Cancel

4. Select **"Create a new port type of port:**" , choose "**Standard TCP/IP Port**", and click "**Next**" to continue.

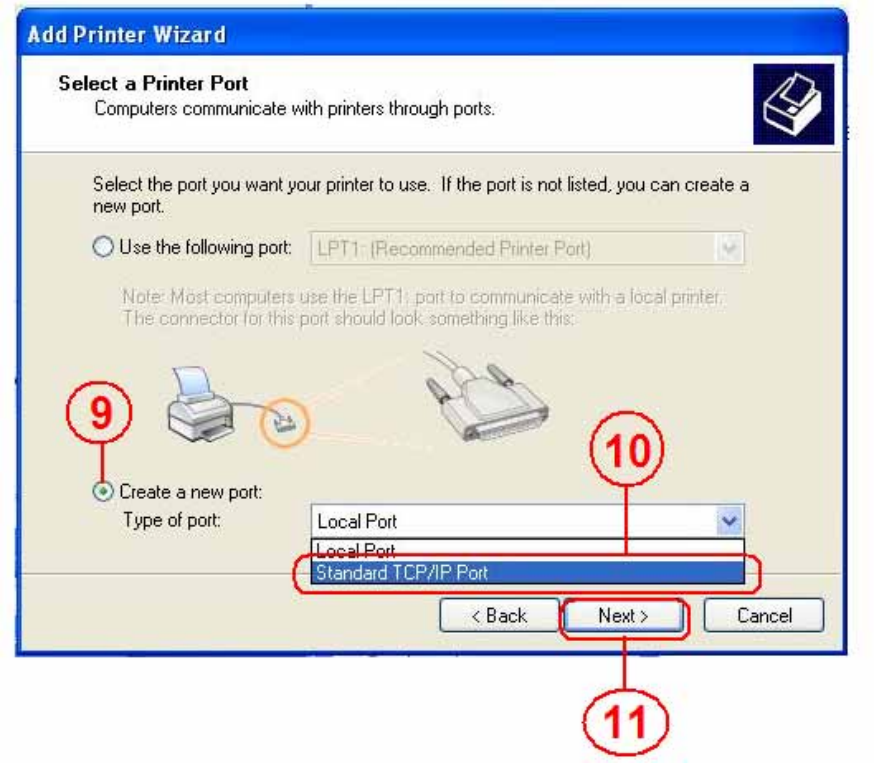
Add Printer Wizard
Select a Printer Port
Computers communicate with printers through ports.
Select the port you want your printer to use. If the port is not listed, you can create a new port.
Use the following port:
LPT1: (Recommended Printer Port)
Note: Most computers use the LPT1: port to communicate with a local printer. The connector for this port should look something like this:
9
10
Create a new port:
Type of port:
Local Port
Local Port
Standard TCP/IP Port
< Back
Next >
Cancel
11

5. Enter the Turbo NAS IP address than click "next" to continue.

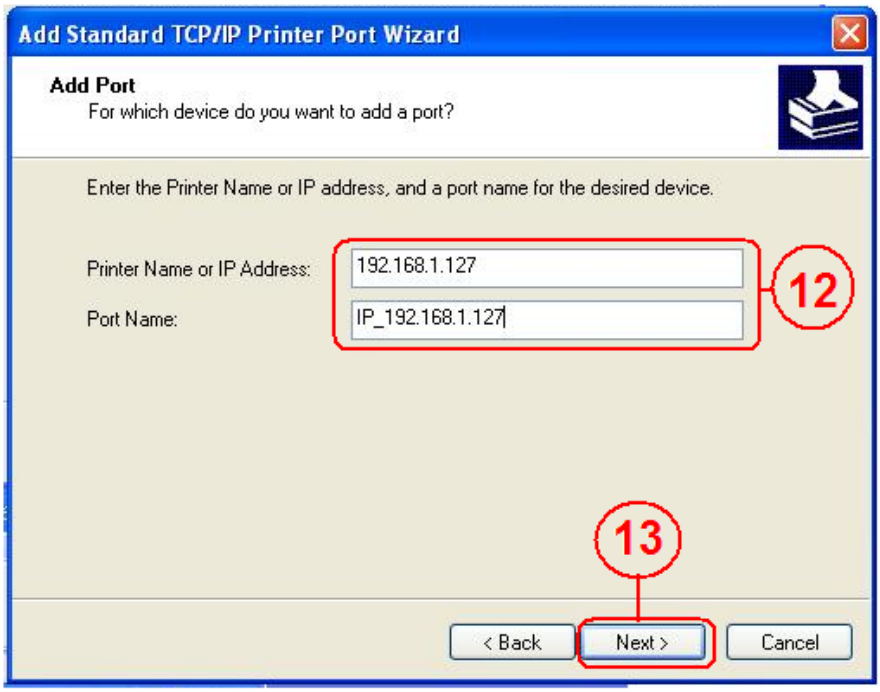
Add Standard TCP/IP Printer Port Wizard
Add Port
For which device do you want to add a port?
Enter the Printer Name or IP address, and a port name for the desired device.
Printer Name or IP Address:
192.168.1.127
Port Name:
IP_192.168.1.127
12
13
< Back
Next >
Cancel

6. Select "**Custom**" and go to "**Setting**".

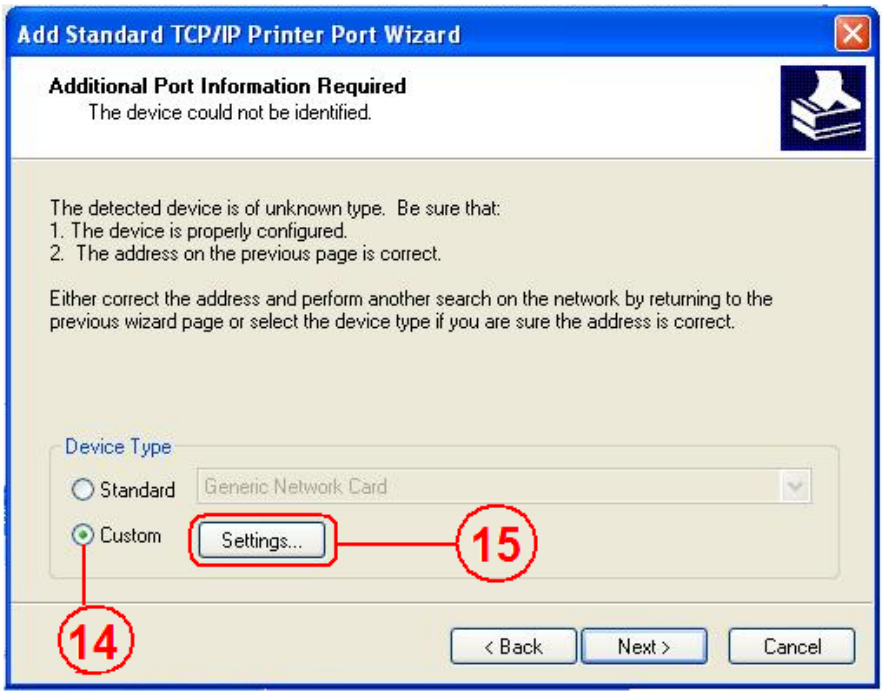
Add Standard TCP/IP Printer Port Wizard
Additional Port Information Required
The device could not be identified.
The detected device is of unknown type. Be sure that:
1. The device is properly configured.
2. The address on the previous page is correct.
Either correct the address and perform another search on the network by returning to the previous wizard page or select the device type if you are sure the address is correct.
Device Type
Standard
Generic Network Card
Custom
Settings...
15
14
< Back
Next >
Cancel

7. Select "**LPR"** in protocol, and give a queue name eg:LRxxx; select LPR byte enable and click "**OK**" to finish the port setting.

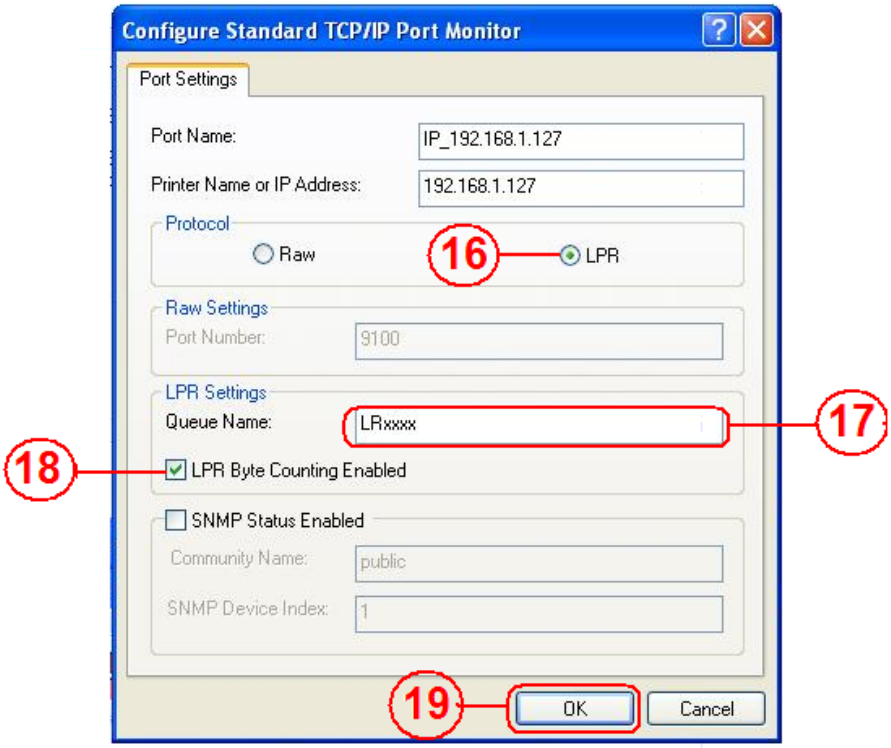

8. Click “Finish” to complete TCP/IP printer setup.

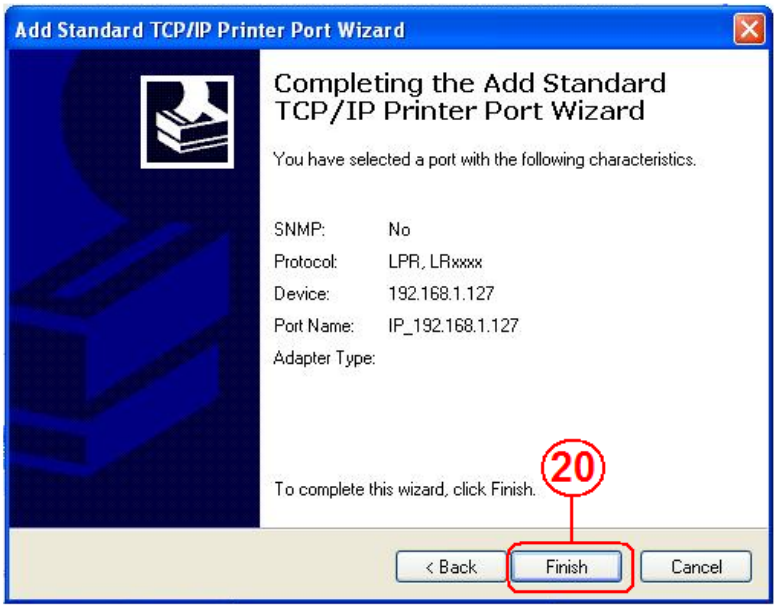

9. Go to “Pinter server page and check printer server status. If status shows “OK”, the printer is setting up successfully.

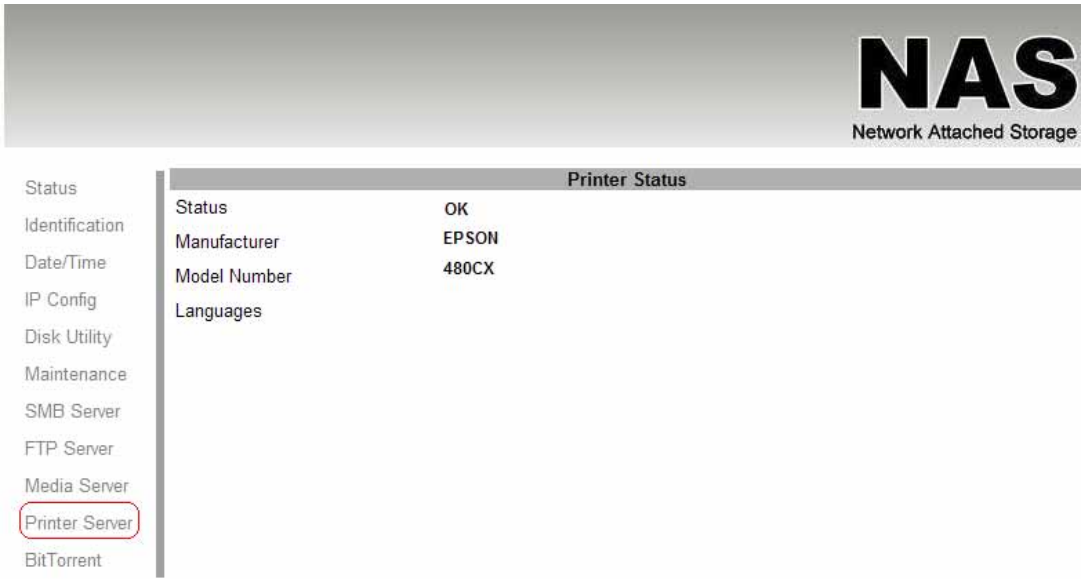

Notes: Turbo NAS Printer server does not support GDI/Host-based printers. For some Multi Function Printers (MFP); scanning functions might not be functional probably. Please contact the printer manufacture for detailed specifications.

9. Bit Torrent server

Turbo NAS supports Bit torrent download independently without using PC resource. Maximum of 4 bit torrent downloads can be running at the same time.

1. Select "**Bit torrent**" server, choose the "**Download Path**" you wish to use, then click "**Apply**" to save setting. (DO NOT change path setting while perform BT downloading, otherwise the downloaded job will be missing).

2. Server port range can be chosen from 6881 to 65535. (6881 is the default setting)

3. Create a upload speed limit: 0=unlimited upload speed (4 KBps is the minimum speed), and click **"Set"** to save setting.

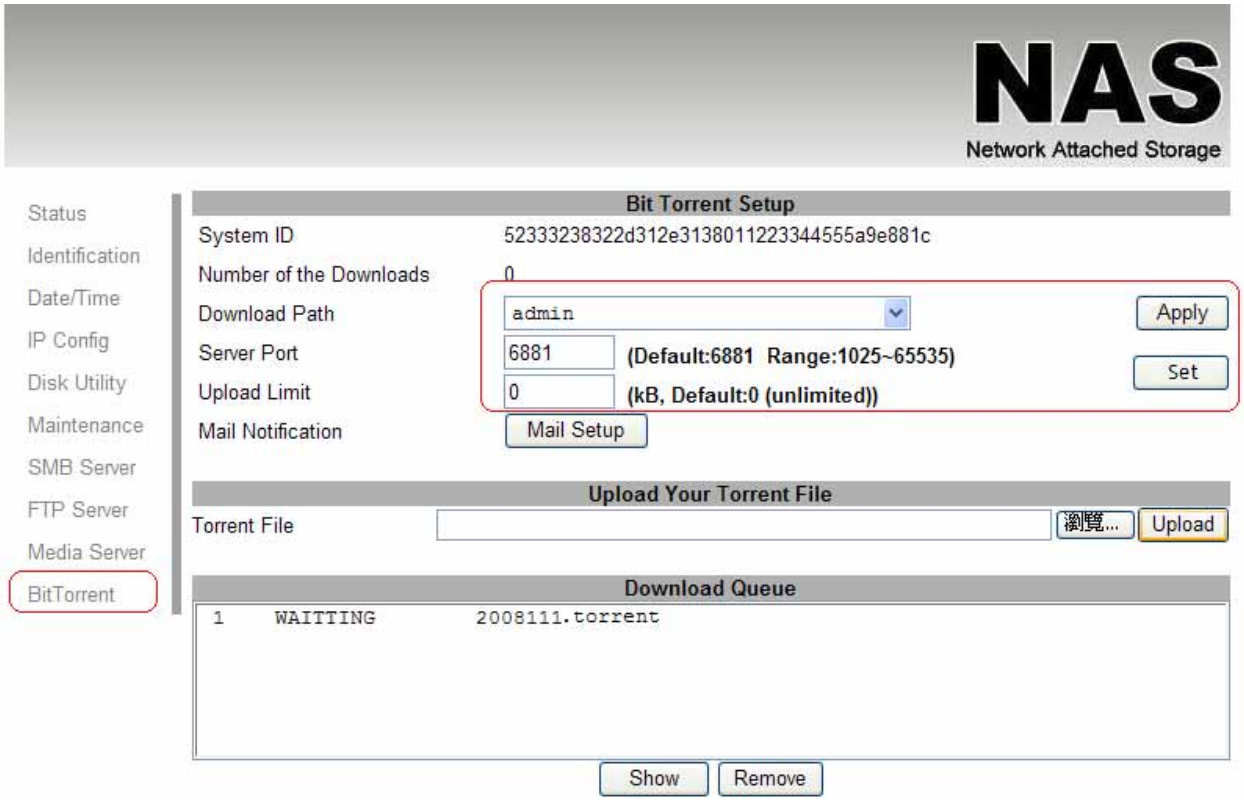

4. Click "**Browse**", select .torrent file, and upload to the download queue.

Note: The jobs listed in the Download Queue will be removed when Turbo NAS is turned off or HDD is removed.

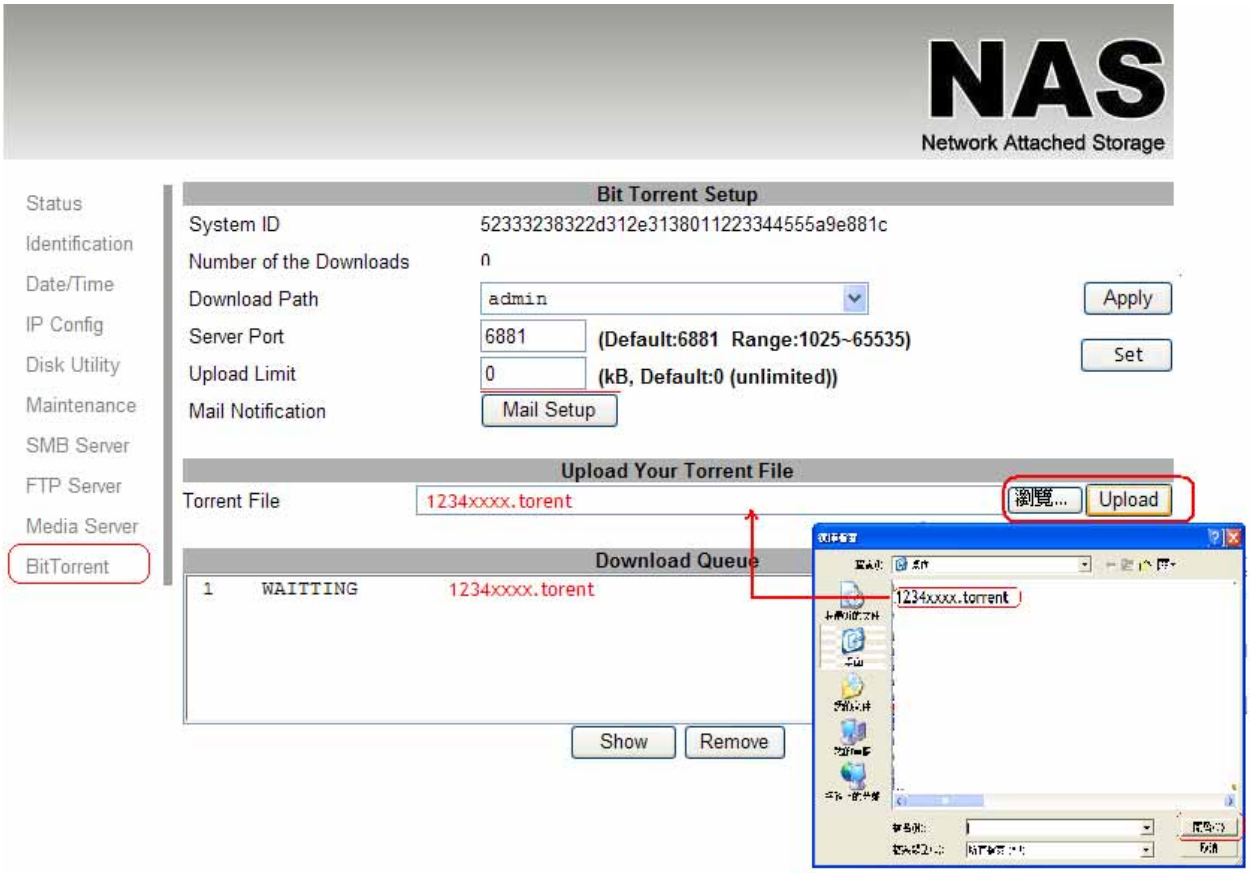

5. Delete BT jobs

After the download complete, click “Remove” to delete the download Jobs form queue window.

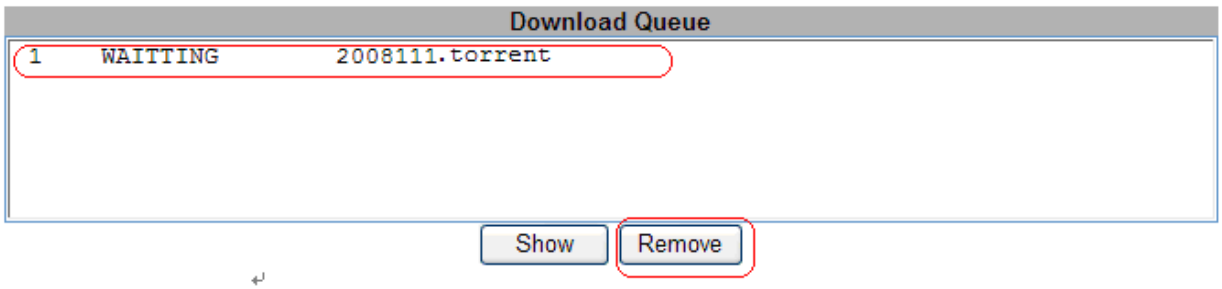

Note: Jobs listed in the “Download Queue” will be removed when Turbo NAS is turned off or HDD is removed.

6. Mail Notification

After the download is successful, an email will be send to designated email address. Click **“Mail setup”**, input SMTP server, recipient email, SMTP A/C, Password, and click **“Apply”** to save setting.

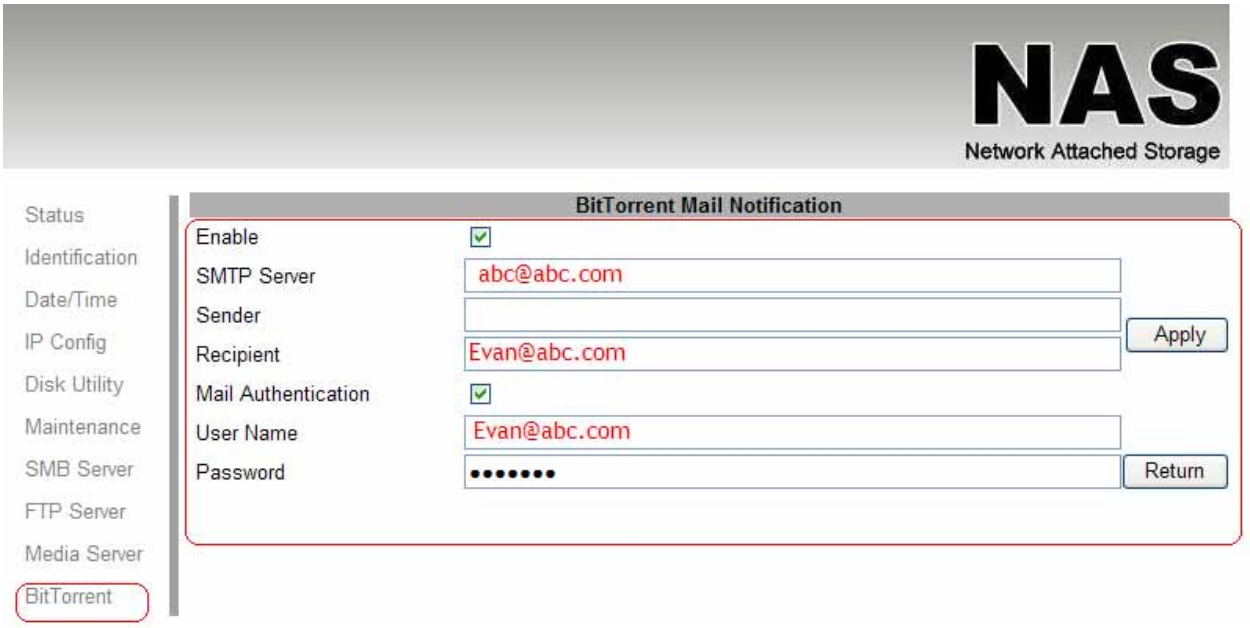
NAS
Network Attached Storage
Status
Identification
Date/Time
IP Config
Disk Utility
Maintenance
SMB Server
FTP Server
Media Server
BitTorrent
BitTorrent Mail Notification
Enable
SMTP Server
abc@abc.com
Sender
Recipient
Evan@abc.com
Mail Authentication
User Name
Evan@abc.com
Password
Apply
Return

10. Mac installations (Mac 10.5.4 or above)

Open Mac browser “Safari” and key-in the host name of the Turbo NAS (for example, “strage-0000”). It will detect Turbo NAS automatically.

10.1 How to setup SAMBA in Mac OS X 10.5.4

1. Click “**Go**” on the toolbar, and select ”**Network**” as the screenshot shown below.

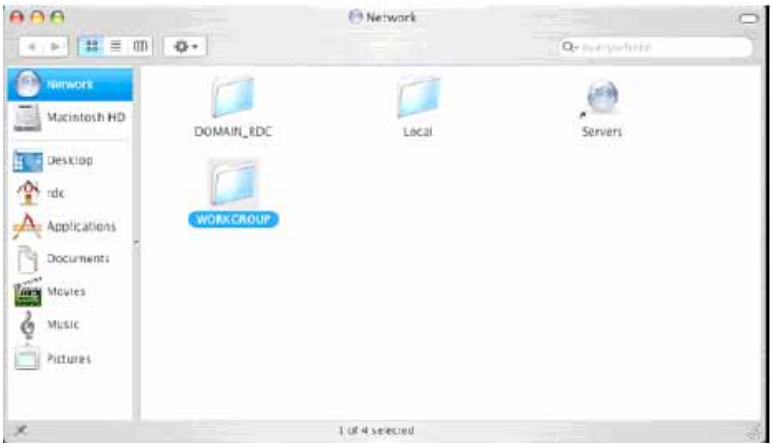

2. Double Click "**WORKGROUP**" (or the correct group name of Turbo NAS), you will find Turbo NAS **"STORAGE-xxxx"** (or the correct name of Turbo NAS).

3. Click on the **storage-xxxx** (or the correct name of Turbo NAS).

4. Select the folder you wish to share, and click "**OK**" to share the folder

5. Click "**OK**" to show the folder in the Desktop.

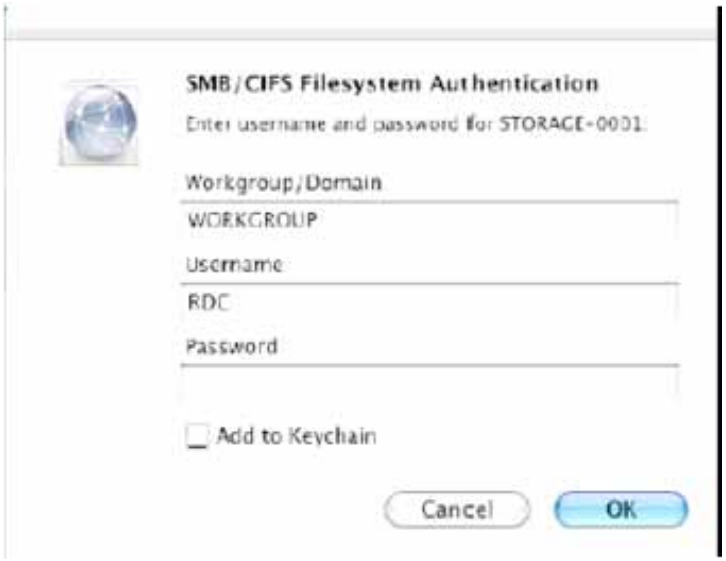
SMB/CIFS Filesystem Authentication
Enter username and password for STORAGE-0001.
Workgroup/Domain
WORKGROUP
Username
RDC
Password
Add to Keychain
Cancel
OK

11. Map your Turbo NAS as a Network Drive

1. Press **"Start"** button on Windows desktop
2. Press **"Search"**
3. Select folders
4. Select Computer or people
5. Select a computer on the network and a new window will appear.
6. Key in the host name, (For example "storage-xxxx") in the "**Computer name**" column and then press "**Search**" button. You will see the following window.

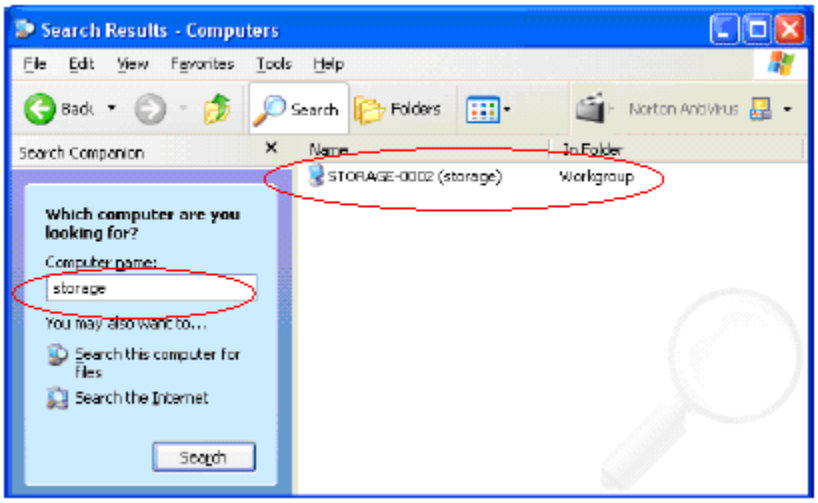

7. Point to the "**Storage-xxxx**", double click the mouse. Choose the folder you wish to map, click mouse on its right button and click "**Map Network Drive**".

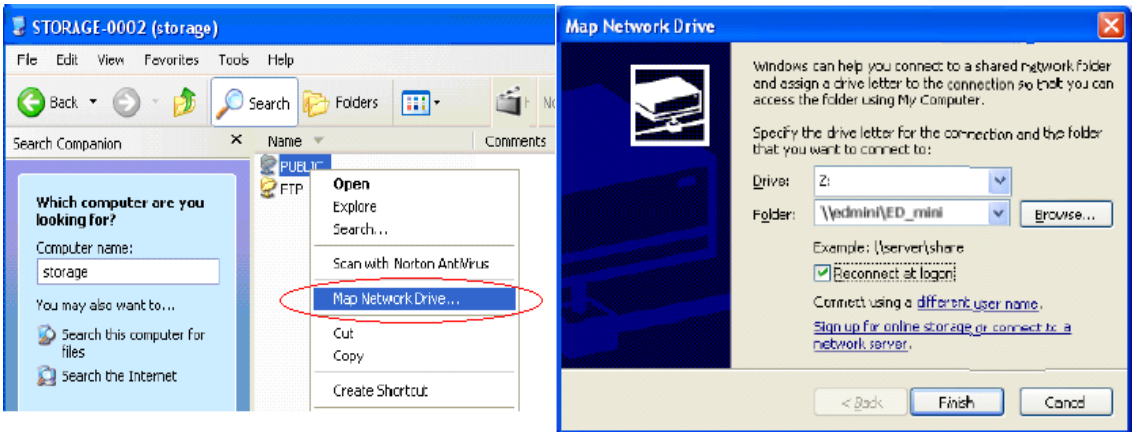

Note: For faster connection and usability, we recommend that you map folders which you use constantly as network drives. This creates a direct access to the shared folders on NAS from My Computer.

12. Q&A

Q: What is Turbo NAS default IP?
A: The default IP address for Turbo NAS is 169.254.0.1 or enter “storage” in IE browser bar to search for it.

Q: What is Turbo NAS default login name and password?
A: The Turbo NAS default Login name: “**admin**”, default password: “**admin**”.

Q: Forgot my login password, How should I do?
A: Please follow the steps below.
1. Press the reset button and keep that position.
2. Unplug and reconnect the power.
3. Wait for 30 seconds, and then release the reset button.
4. Turbo NAS will go back to factory defaults.

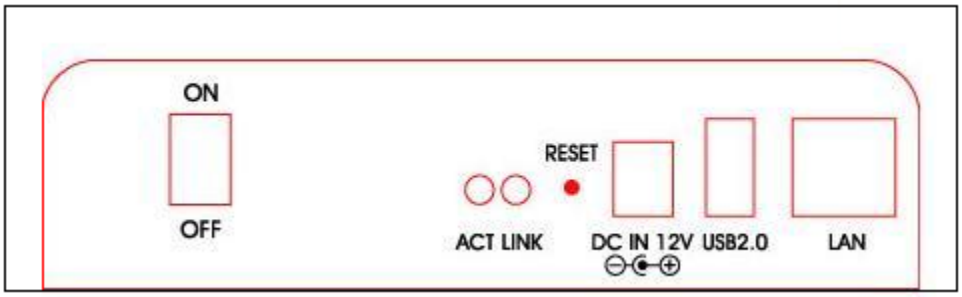

PS: Only SAMBA/FTP account settings will remain in the Turbo NAS; others will go back to factory default.

Q: Why can’t I create/share folders in SMB or FTP server?
A: To avoid languages support issue, you are suggested to create/share folders with English characters only.

Q: Why can’t I upload the files via LAN connection or got disconnected?
A1: Please make you are connected to the network properly and you have the access right (read & write) for the folders.

Q: How to setup Turbo NAS to be in daylight saving time?
A: Turbo NAS does not support Daylight saving time setting.

Q: Why WinXP can not enter SMB folder with password via Turbo NAS?
A: Please update Win XP to SP2 or above. After update, please make sure if you have installed Norton Internet Security, if you do, please check with Norton service center.

Q: What Operating Systems does Turbo NAS support?
A: Turbo NAS supports Microsoft Windows 2000 / XP / Vista and Apple Macintosh OS 10.5.4 above.

Q: How do I access Turbo NAS via the Internet?
A: If your Turbo NAS is configured with a fixed public IP, please perform the following steps.

- Enter the management web base of Turbo NAS, and go to the FTP Server page to enable FTP Status.
- Create user account and limits of authority.
- Open Microsoft Internet Explorer or other FTP client software (recommended), and enter “ftp:// Turbo NAS IP” in the IP address field.

Q: Why FTP can not link to Turbo NAS or show link time out when using IE?
A: Due to IE FTP is not compatible with some routers, you are suggested to use FTP client software to start with. If you would like to use IE FTP to link to Turbo NAS, please refer to following steps:
- Please open port 21 and 20 on Router and link to Turbo NAS.
- Open IE > Tool > Internet Options>Advance
- Click "Enable folder view for FTP site" and click "OK"

Q: Why my FTP client software can not link to Turbo NAS or fail during file transfer??
A: Due to software design, it’s possible that certain FTP software is not compatible with Turbo NAS.
Turbo NAS is now tested with most of popular FTP client software such as CuteFTP or SyncQuick FTP software.

Q: What is the limitation of user to login FTP and Samba server?
A:

Samba Server	User Level Access (maximum create 16 user accounts, 16 folders shared by one account)
FTP Server	maximum create 16 user account, 16 folders shared by one account
Maximum User Login	FTP 8 User/Samba 8 User (Total 64 TCP connection at the same time)

Q: Any limitations for Turbo NAS file name length?
A: The limitation of length of file folder is 12 bytes.

Q: What can DHCP do as well with Turbo NAS?
A: You can setup Turbo NAS as a DHCP server if there is no any other DHCP Server exists in your local network. Otherwise, Turbo NAS will automatically turn off its DHCP server function and become a DHCP client. For example, if you have installed a router with built-in (activate) DHCP Server, Turbo NAS will automatically setup itself as DHCP client.